

- Legend**
- Cambridge City Boundary
  - South Cambridgeshire Boundary
  - Control Gate
  - Debris Screen
  - Outfall
  - Ramp
  - Security Screen
  - Steps
  - Stilling Basin
  - Stilling Well
  - Water Baffles
  - Bridge Abutment
  - Demountable Defence
  - Embankment
  - Engineered High Ground
  - Flood Gate
  - Spillway
  - Wall



**Notes**

This map presents the various hydraulic features that influence the hydrological regime and risk of flooding. The layers are provided by the Environment Agency (EA) and show flood defences currently owned, managed or inspected by the EA.

Flood defences can be structures, buildings or parts of buildings. Typically these are earth banks, stone and concrete walls, or sheet-piling that is used to prevent or control the extent of flooding.

A defence is any asset that provides flood defence or coastal protection functions. This includes both man-made and natural defences. Natural defences may include man-made elements to make them more effective or protect them from erosion. Normally a number of assets will be used together to manage the risk in a particular area, working in combination within a risk management system.



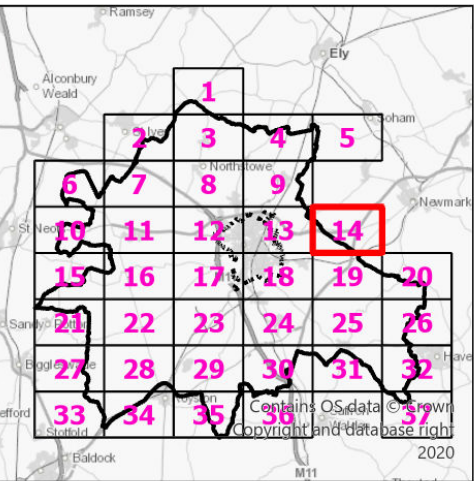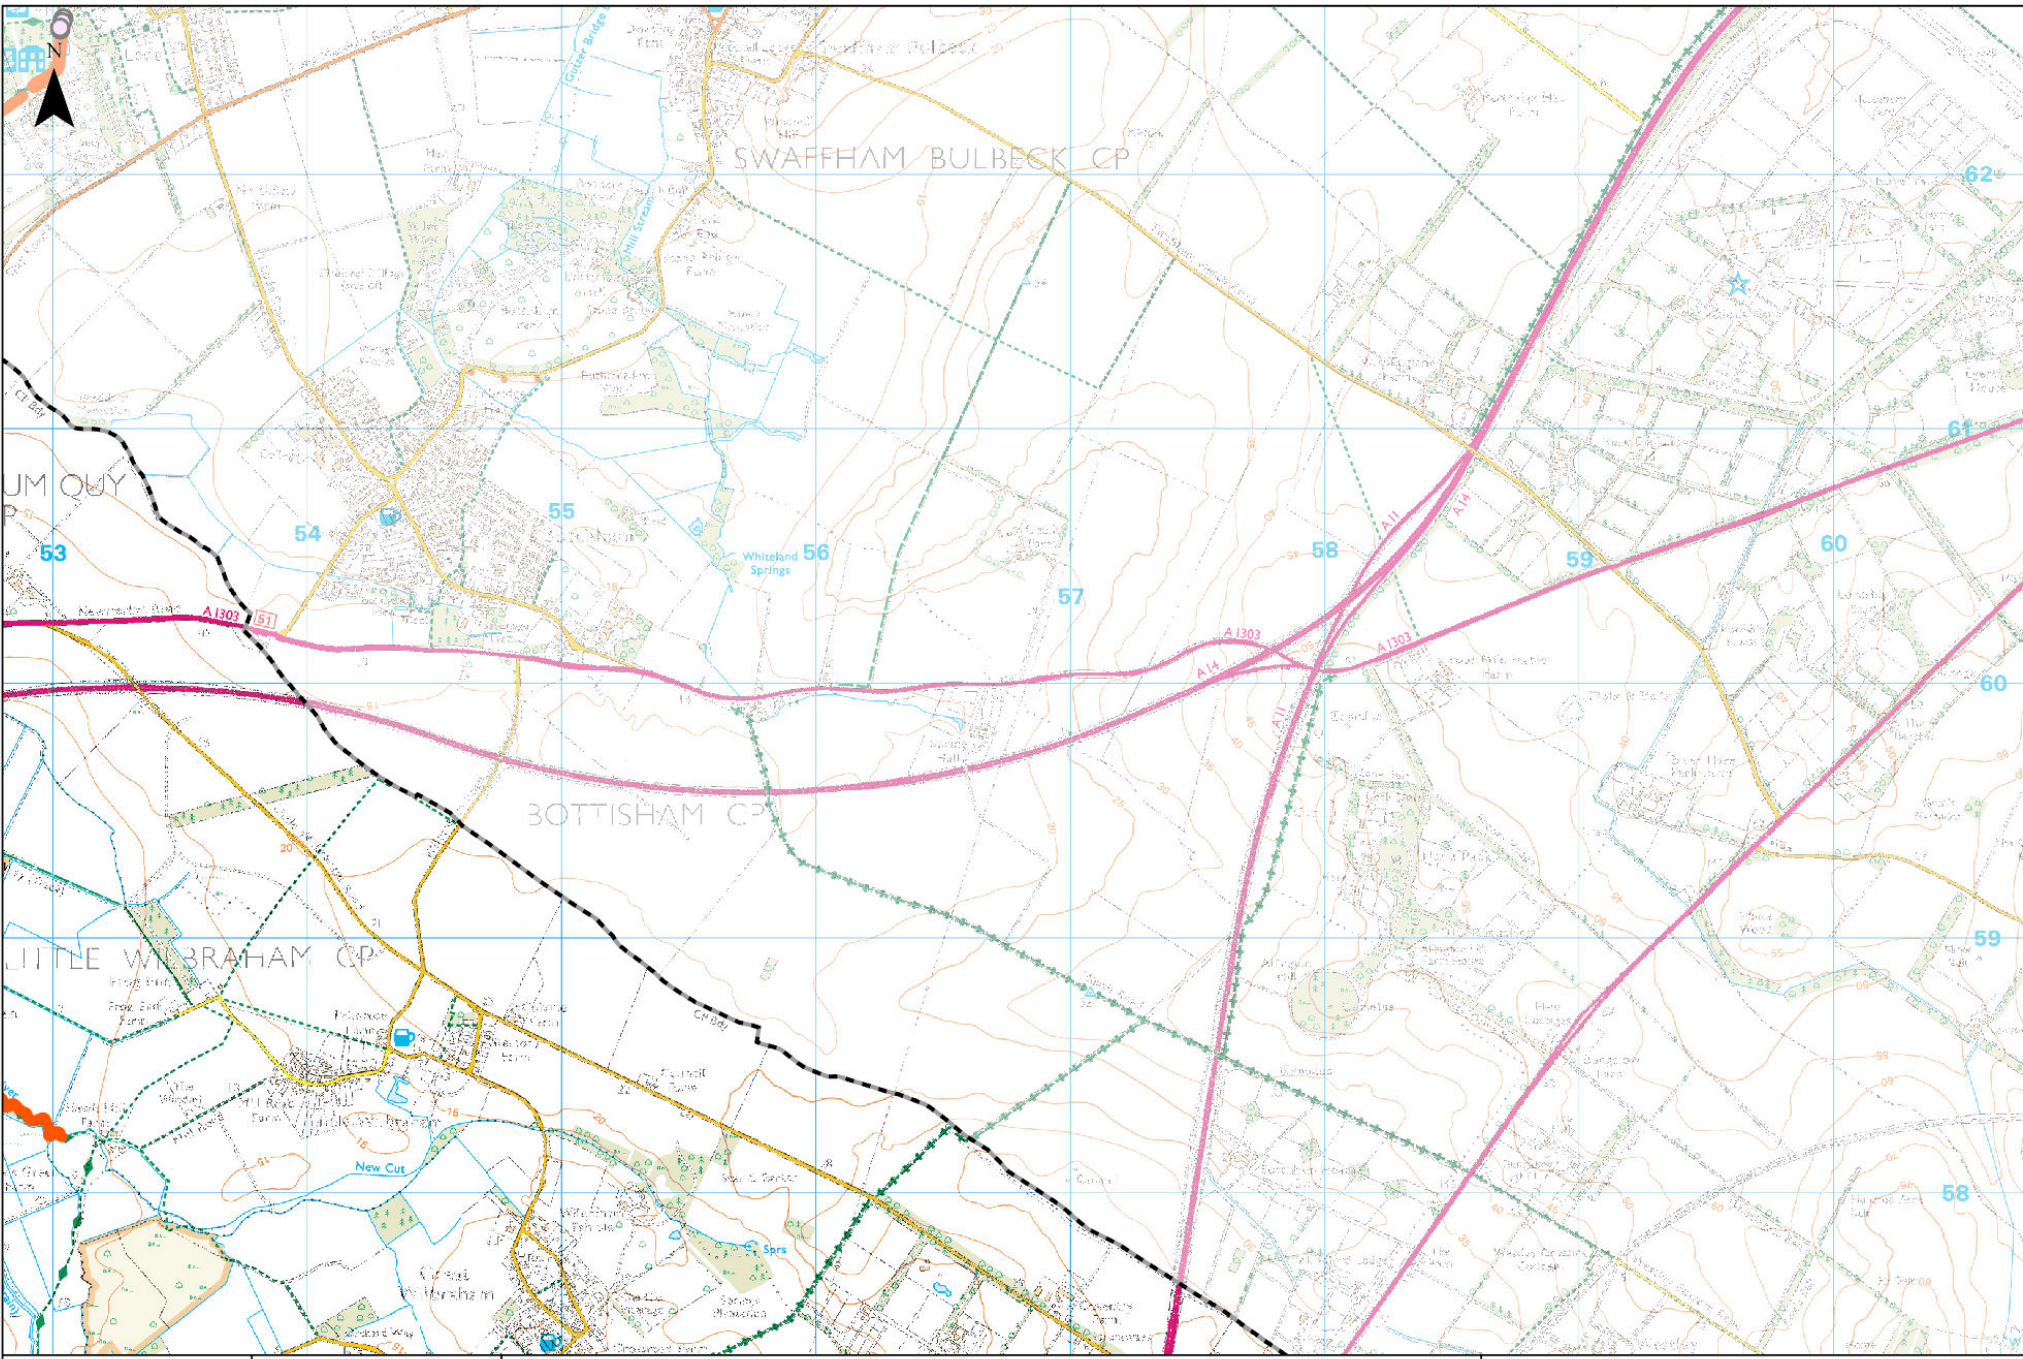

**Legend**

Cambridge City Boundary	Stilling Well
South Cambridgeshire Boundary	Water Baffles
<b>Defences (EA Maintained)</b>	
Control Gate	Bridge Abutment
Debris Screen	Demountable Defence
Outfall	Embankment
Ramp	Engineered High Ground
Security Screen	Flood Gate
Steps	Spillway
Stilling Basin	Wall



**Notes**

This map presents the various hydraulic features that influence the hydrological regime and risk of flooding. The layers are provided by the Environment Agency (EA) and show flood defences currently owned, managed or inspected by the EA.

Flood defences can be structures, buildings or parts of buildings. Typically these are earth banks, stone and concrete walls, or sheet-piling that is used to prevent or control the extent of flooding.

A defence is any asset that provides flood defence or coastal protection functions. This includes both man-made and natural defences. Natural defences may include man-made elements to make them more effective or protect them from erosion. Normally a number of assets will be used together to manage the risk in a particular area, working in combination within a risk management system.



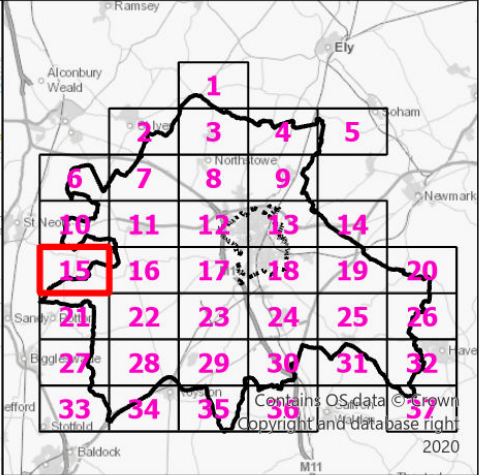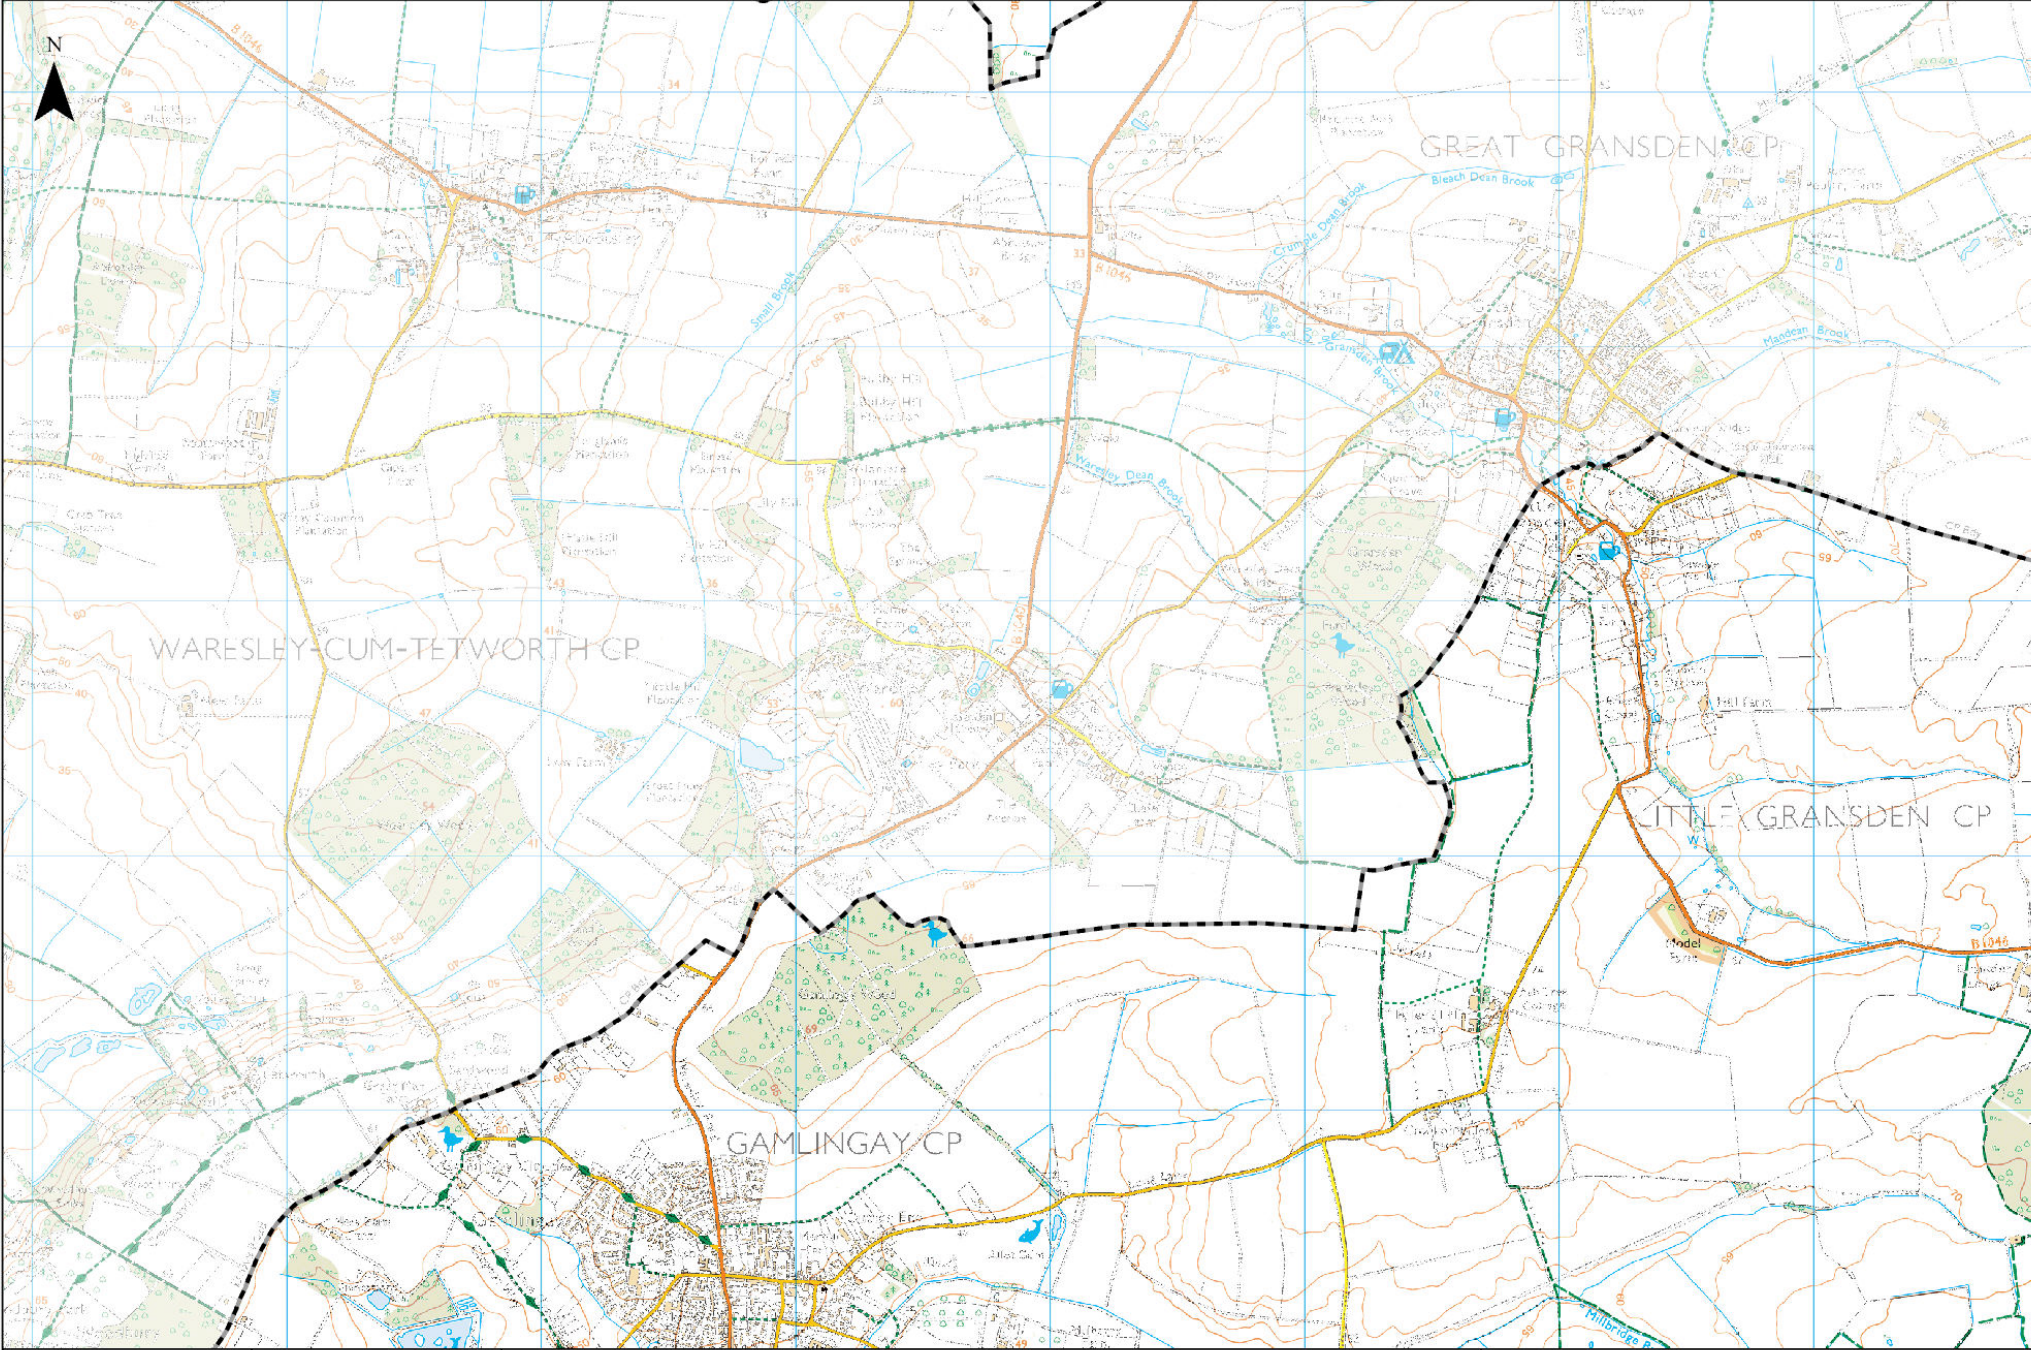

**Legend**

Cambridge City Boundary	Stilling Well
South Cambridgeshire Boundary	Water Baffles
<b>Defences (EA Maintained)</b>	
Control Gate	Bridge Abutment
Debris Screen	Demountable Defence
Outfall	Embankment
Ramp	Engineered High Ground
Security Screen	Flood Gate
Steps	Spillway
Stilling Basin	Wall



**Notes**

This map presents the various hydraulic features that influence the hydrological regime and risk of flooding. The layers are provided by the Environment Agency (EA) and show flood defences currently owned, managed or inspected by the EA.

Flood defences can be structures, buildings or parts of buildings. Typically these are earth banks, stone and concrete walls, or sheet-piling that is used to prevent or control the extent of flooding.

A defence is any asset that provides flood defence or coastal protection functions. This includes both man-made and natural defences. Natural defences may include man-made elements to make them more effective or protect them from erosion. Normally a number of assets will be used together to manage the risk in a particular area, working in combination within a risk management system.



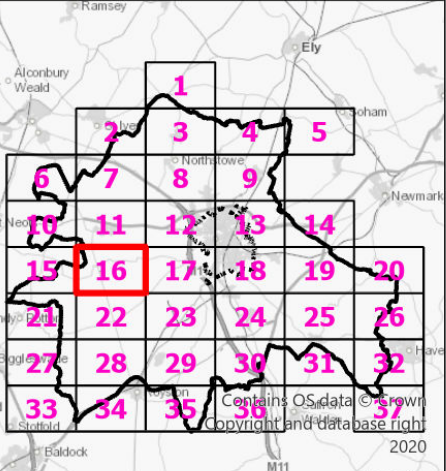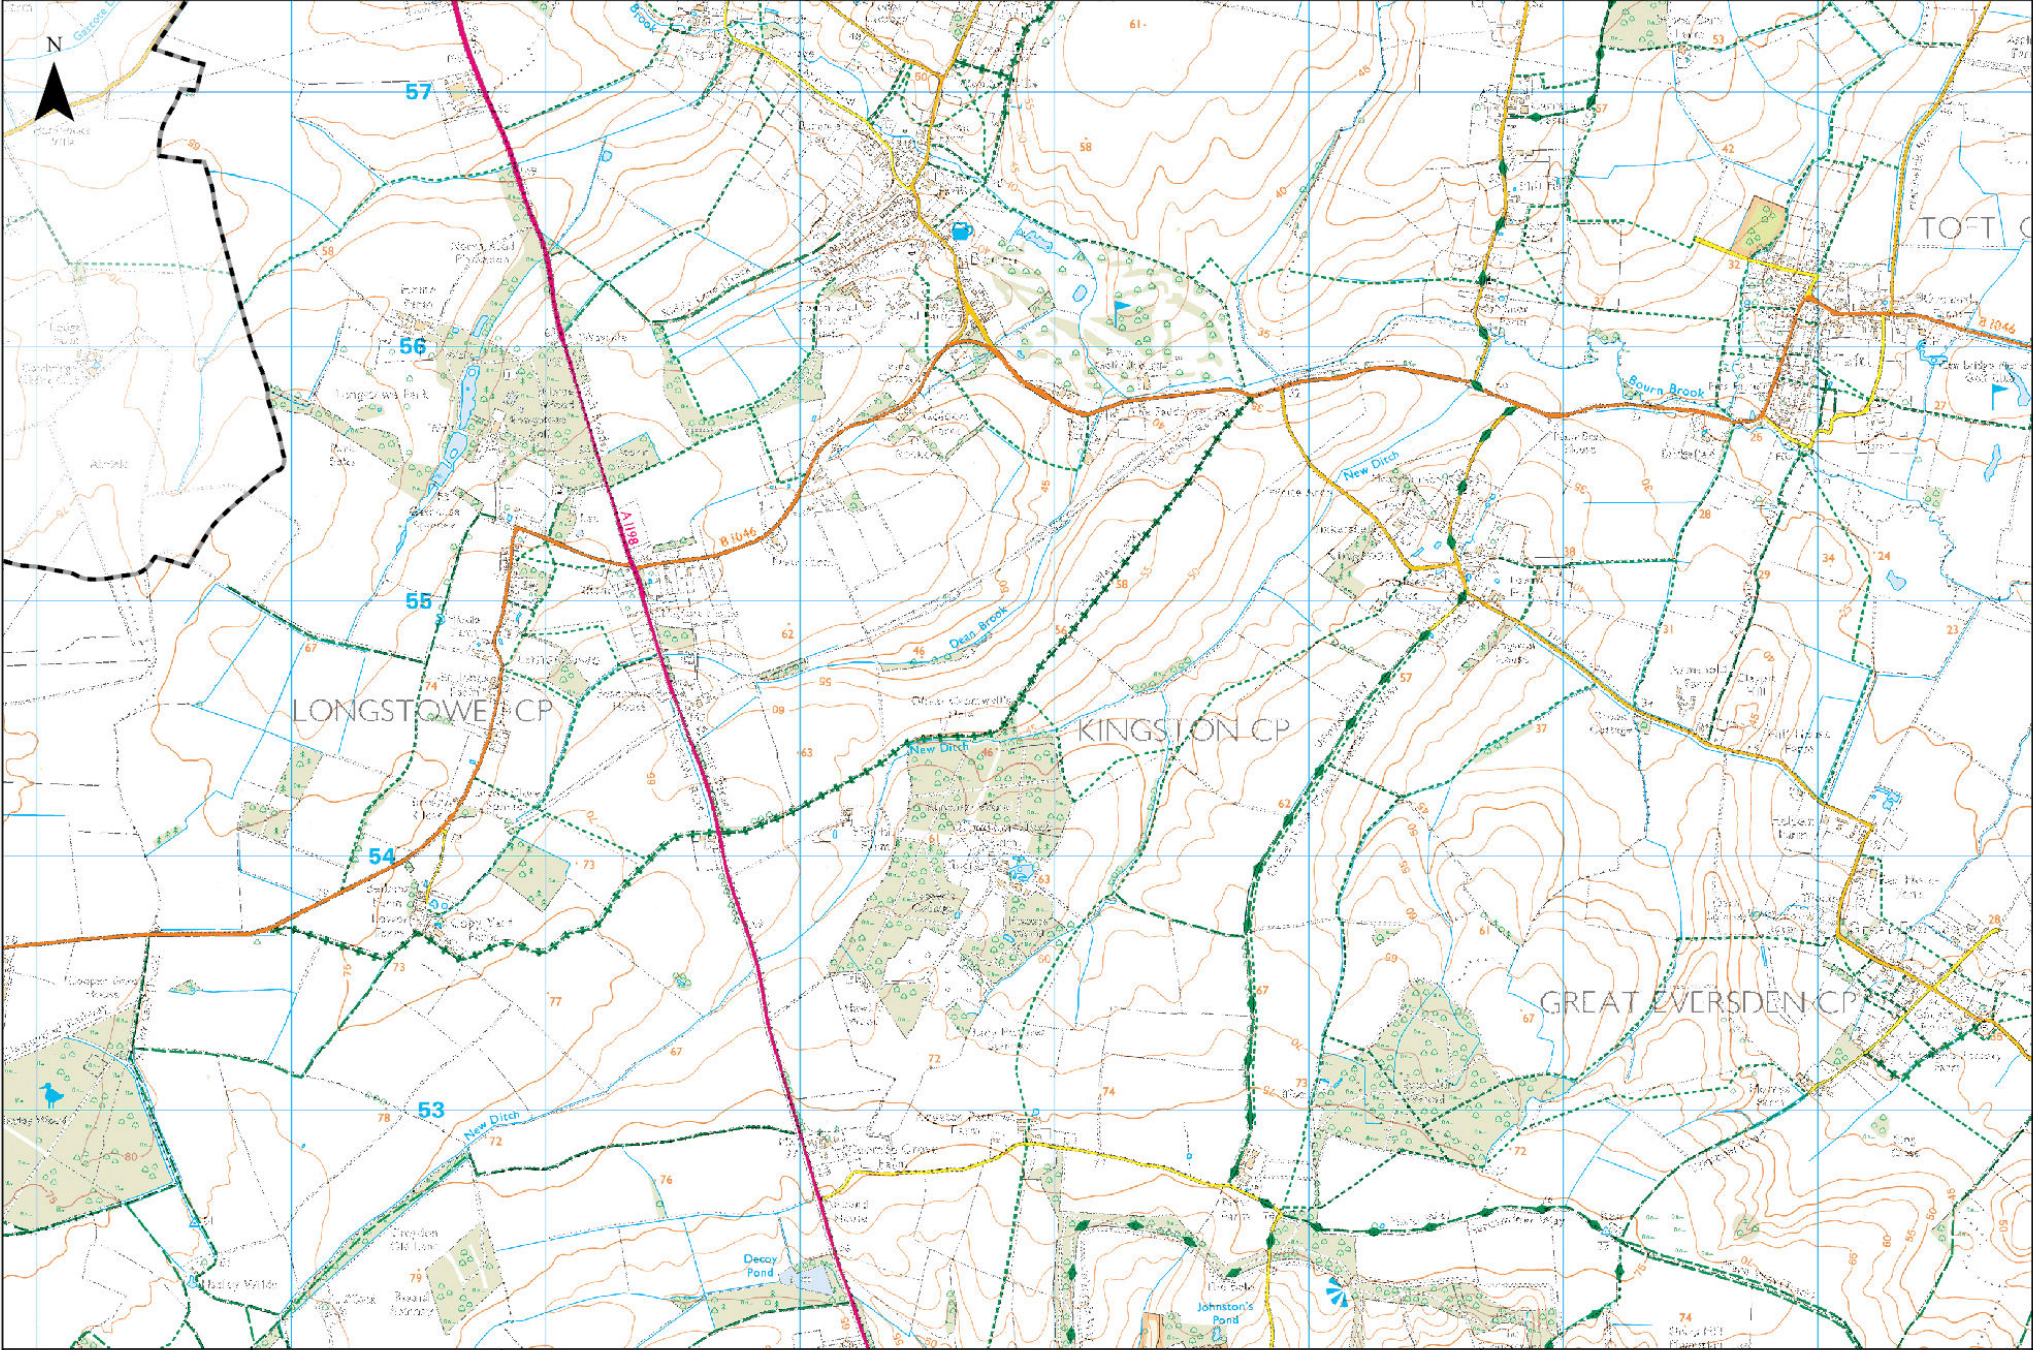

**Legend**

Cambridge City Boundary

South Cambridgeshire Boundary

Control Gate

Debris Screen

Outfall

Ramp

Security Screen

Steps

Stilling Basin

Stilling Well

Water Baffles

Bridge Abutment

Demountable Defence

Embankment

Engineered High Ground

Flood Gate

Spillway

Wall



**Notes**

This map presents the various hydraulic features that influence the hydrological regime and risk of flooding. The layers are provided by the Environment Agency (EA) and show flood defences currently owned, managed or inspected by the EA.

Flood defences can be structures, buildings or parts of buildings. Typically these are earth banks, stone and concrete walls, or sheet-piling that is used to prevent or control the extent of flooding.

A defence is any asset that provides flood defence or coastal protection functions. This includes both man-made and natural defences. Natural defences may include man-made elements to make them more effective or protect them from erosion. Normally a number of assets will be used together to manage the risk in a particular area, working in combination within a risk management system.



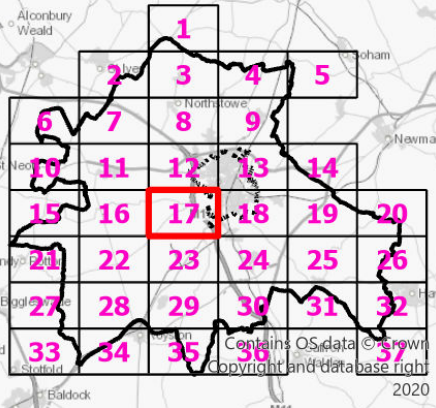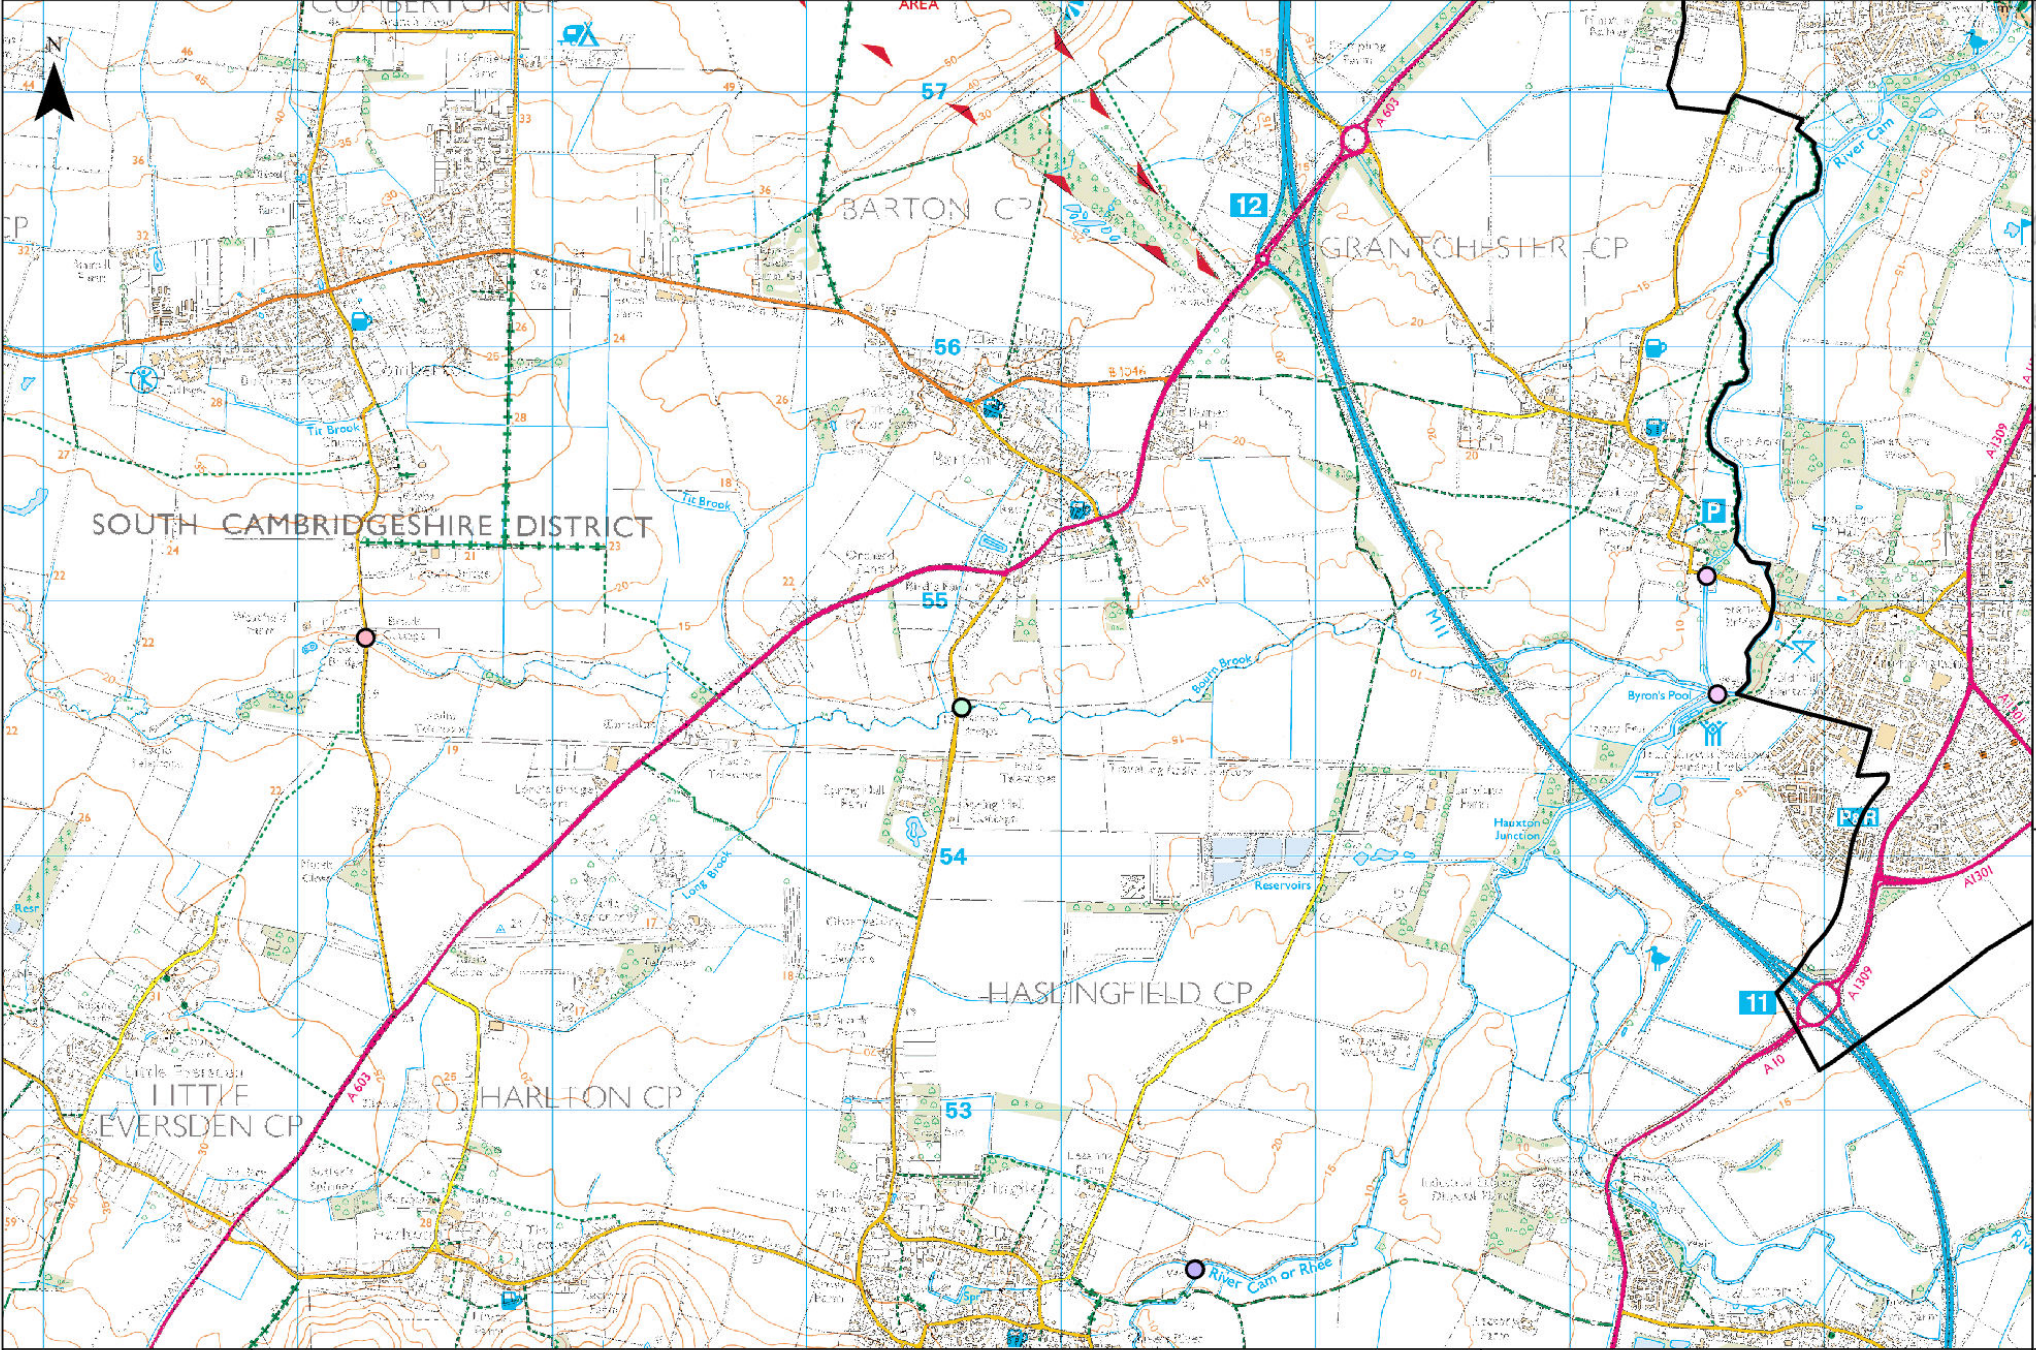

- Legend**
- Cambridge City Boundary
  - South Cambridgeshire Boundary
  - Control Gate
  - Debris Screen
  - Outfall
  - Ramp
  - Security Screen
  - Steps
  - Stilling Basin
  - Stilling Well
  - Water Baffles
  - Bridge Abutment
  - Demountable Defence
  - Embankment
  - Engineered High Ground
  - Flood Gate
  - Spillway
  - Wall



**Notes**

This map presents the various hydraulic features that influence the hydrological regime and risk of flooding. The layers are provided by the Environment Agency (EA) and show flood defences currently owned, managed or inspected by the EA.

Flood defences can be structures, buildings or parts of buildings. Typically these are earth banks, stone and concrete walls, or sheet-piling that is used to prevent or control the extent of flooding.

A defence is any asset that provides flood defence or coastal protection functions. This includes both man-made and natural defences. Natural defences may include man-made elements to make them more effective or protect them from erosion. Normally a number of assets will be used together to manage the risk in a particular area, working in combination within a risk management system.



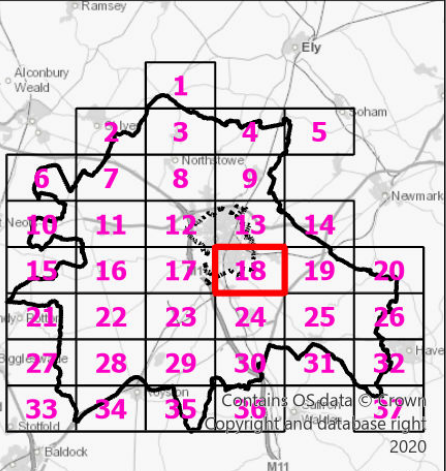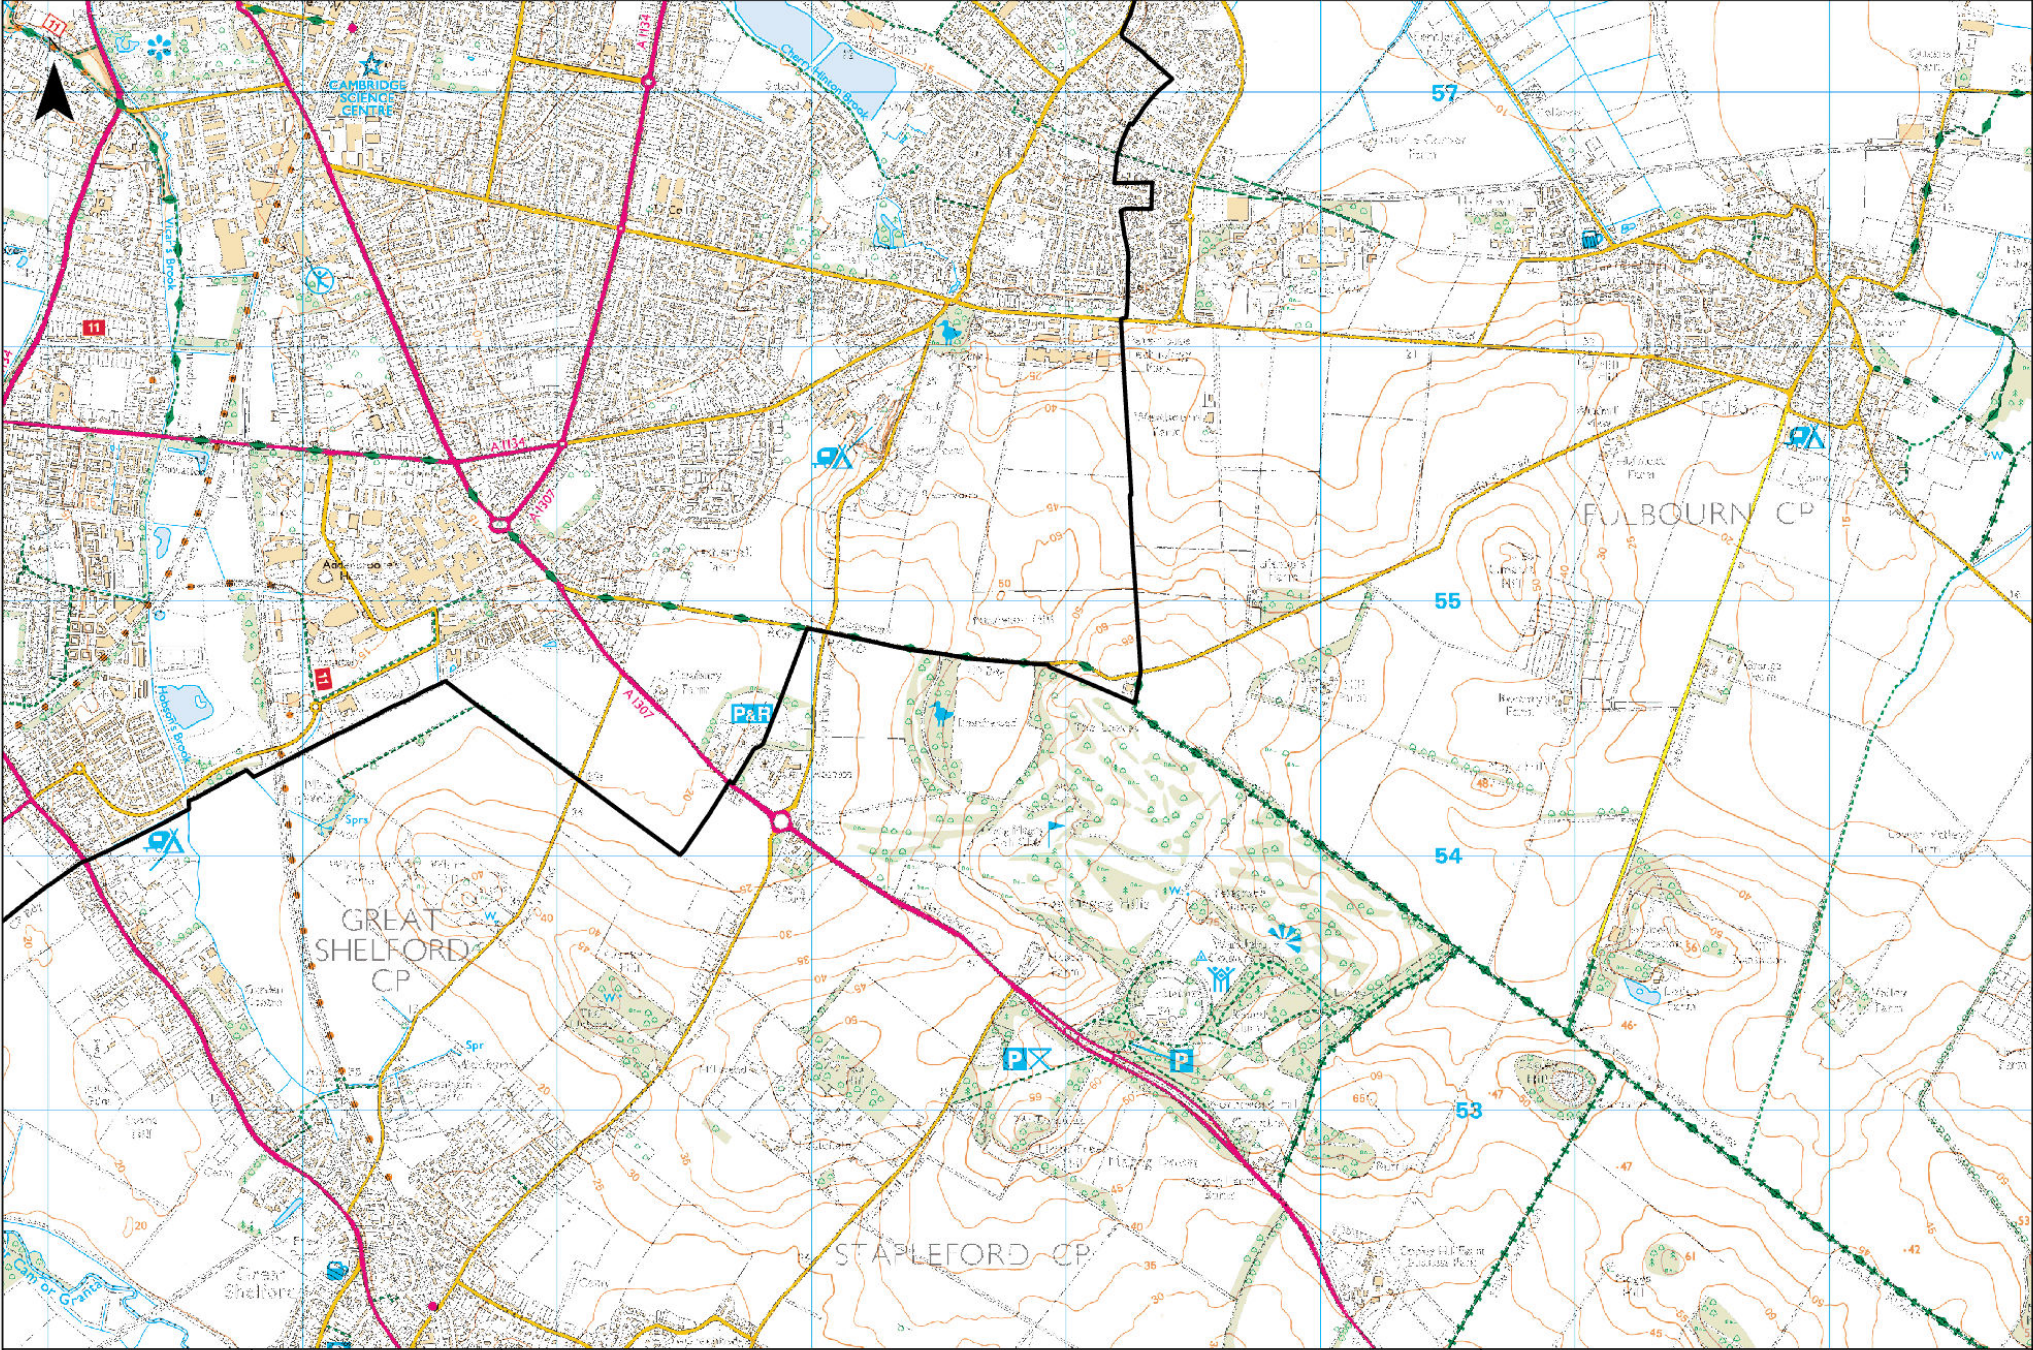

**Legend**

Cambridge City Boundary	Stilling Well
South Cambridgeshire Boundary	Water Baffles
<b>Defences (EA Maintained)</b>	
Control Gate	Bridge Abutment
Debris Screen	Demountable Defence
Outfall	Embankment
Ramp	Engineered High Ground
Security Screen	Flood Gate
Steps	Spillway
Stilling Basin	Wall



**Notes**

This map presents the various hydraulic features that influence the hydrological regime and risk of flooding. The layers are provided by the Environment Agency (EA) and show flood defences currently owned, managed or inspected by the EA.

Flood defences can be structures, buildings or parts of buildings. Typically these are earth banks, stone and concrete walls, or sheet-piling that is used to prevent or control the extent of flooding.

A defence is any asset that provides flood defence or coastal protection functions. This includes both man-made and natural defences. Natural defences may include man-made elements to make them more effective or protect them from erosion. Normally a number of assets will be used together to manage the risk in a particular area, working in combination within a risk management system.



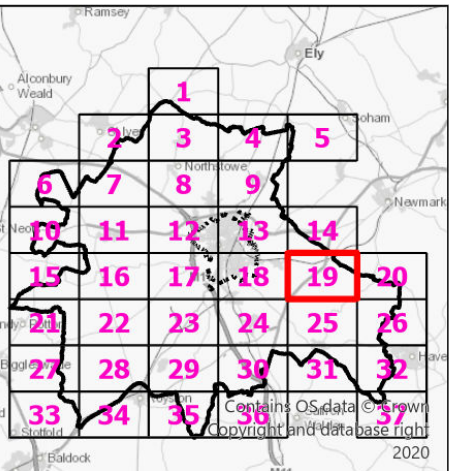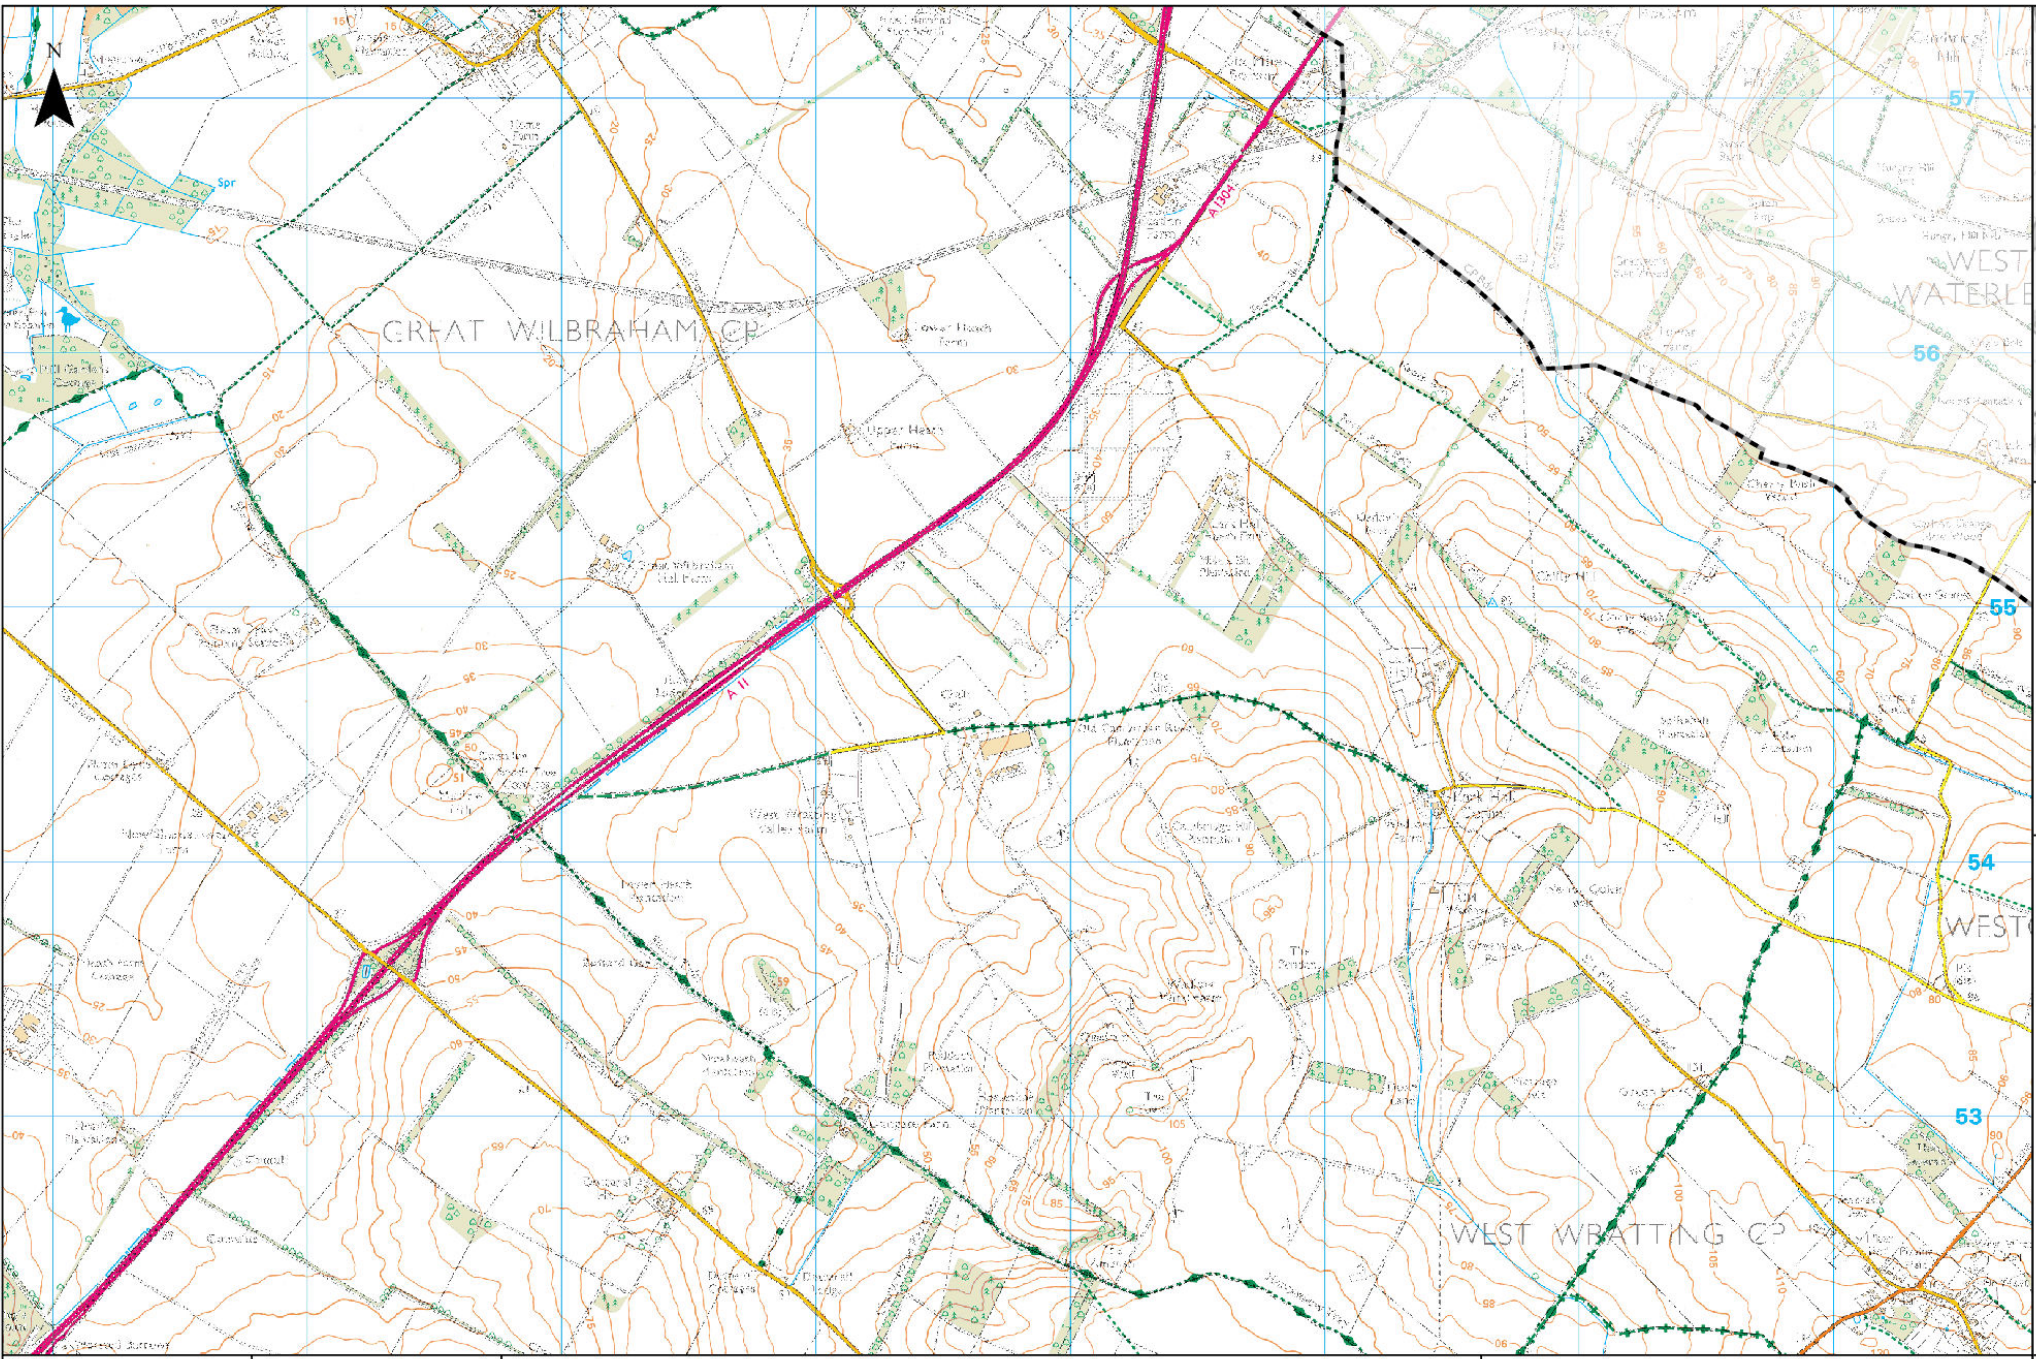

- Legend**
- Cambridge City Boundary
  - South Cambridgeshire Boundary
  - Control Gate
  - Debris Screen
  - Outfall
  - Ramp
  - Security Screen
  - Steps
  - Stilling Basin
  - Stilling Well
  - Water Baffles
  - Bridge Abutment
  - Demountable Defence
  - Embankment
  - Engineered High Ground
  - Flood Gate
  - Spillway
  - Wall



**Notes**

This map presents the various hydraulic features that influence the hydrological regime and risk of flooding. The layers are provided by the Environment Agency (EA) and show flood defences currently owned, managed or inspected by the EA.

Flood defences can be structures, buildings or parts of buildings. Typically these are earth banks, stone and concrete walls, or sheet-piling that is used to prevent or control the extent of flooding.

A defence is any asset that provides flood defence or coastal protection functions. This includes both man-made and natural defences. Natural defences may include man-made elements to make them more effective or protect them from erosion. Normally a number of assets will be used together to manage the risk in a particular area, working in combination within a risk management system.



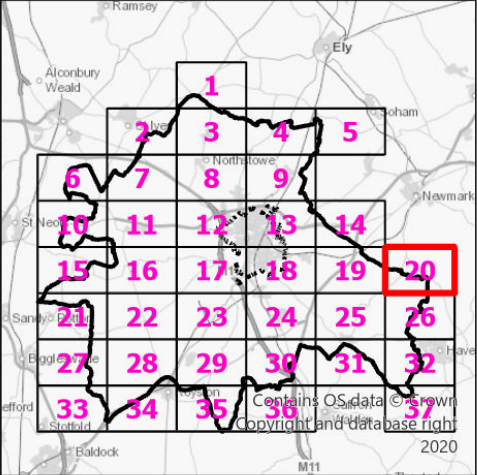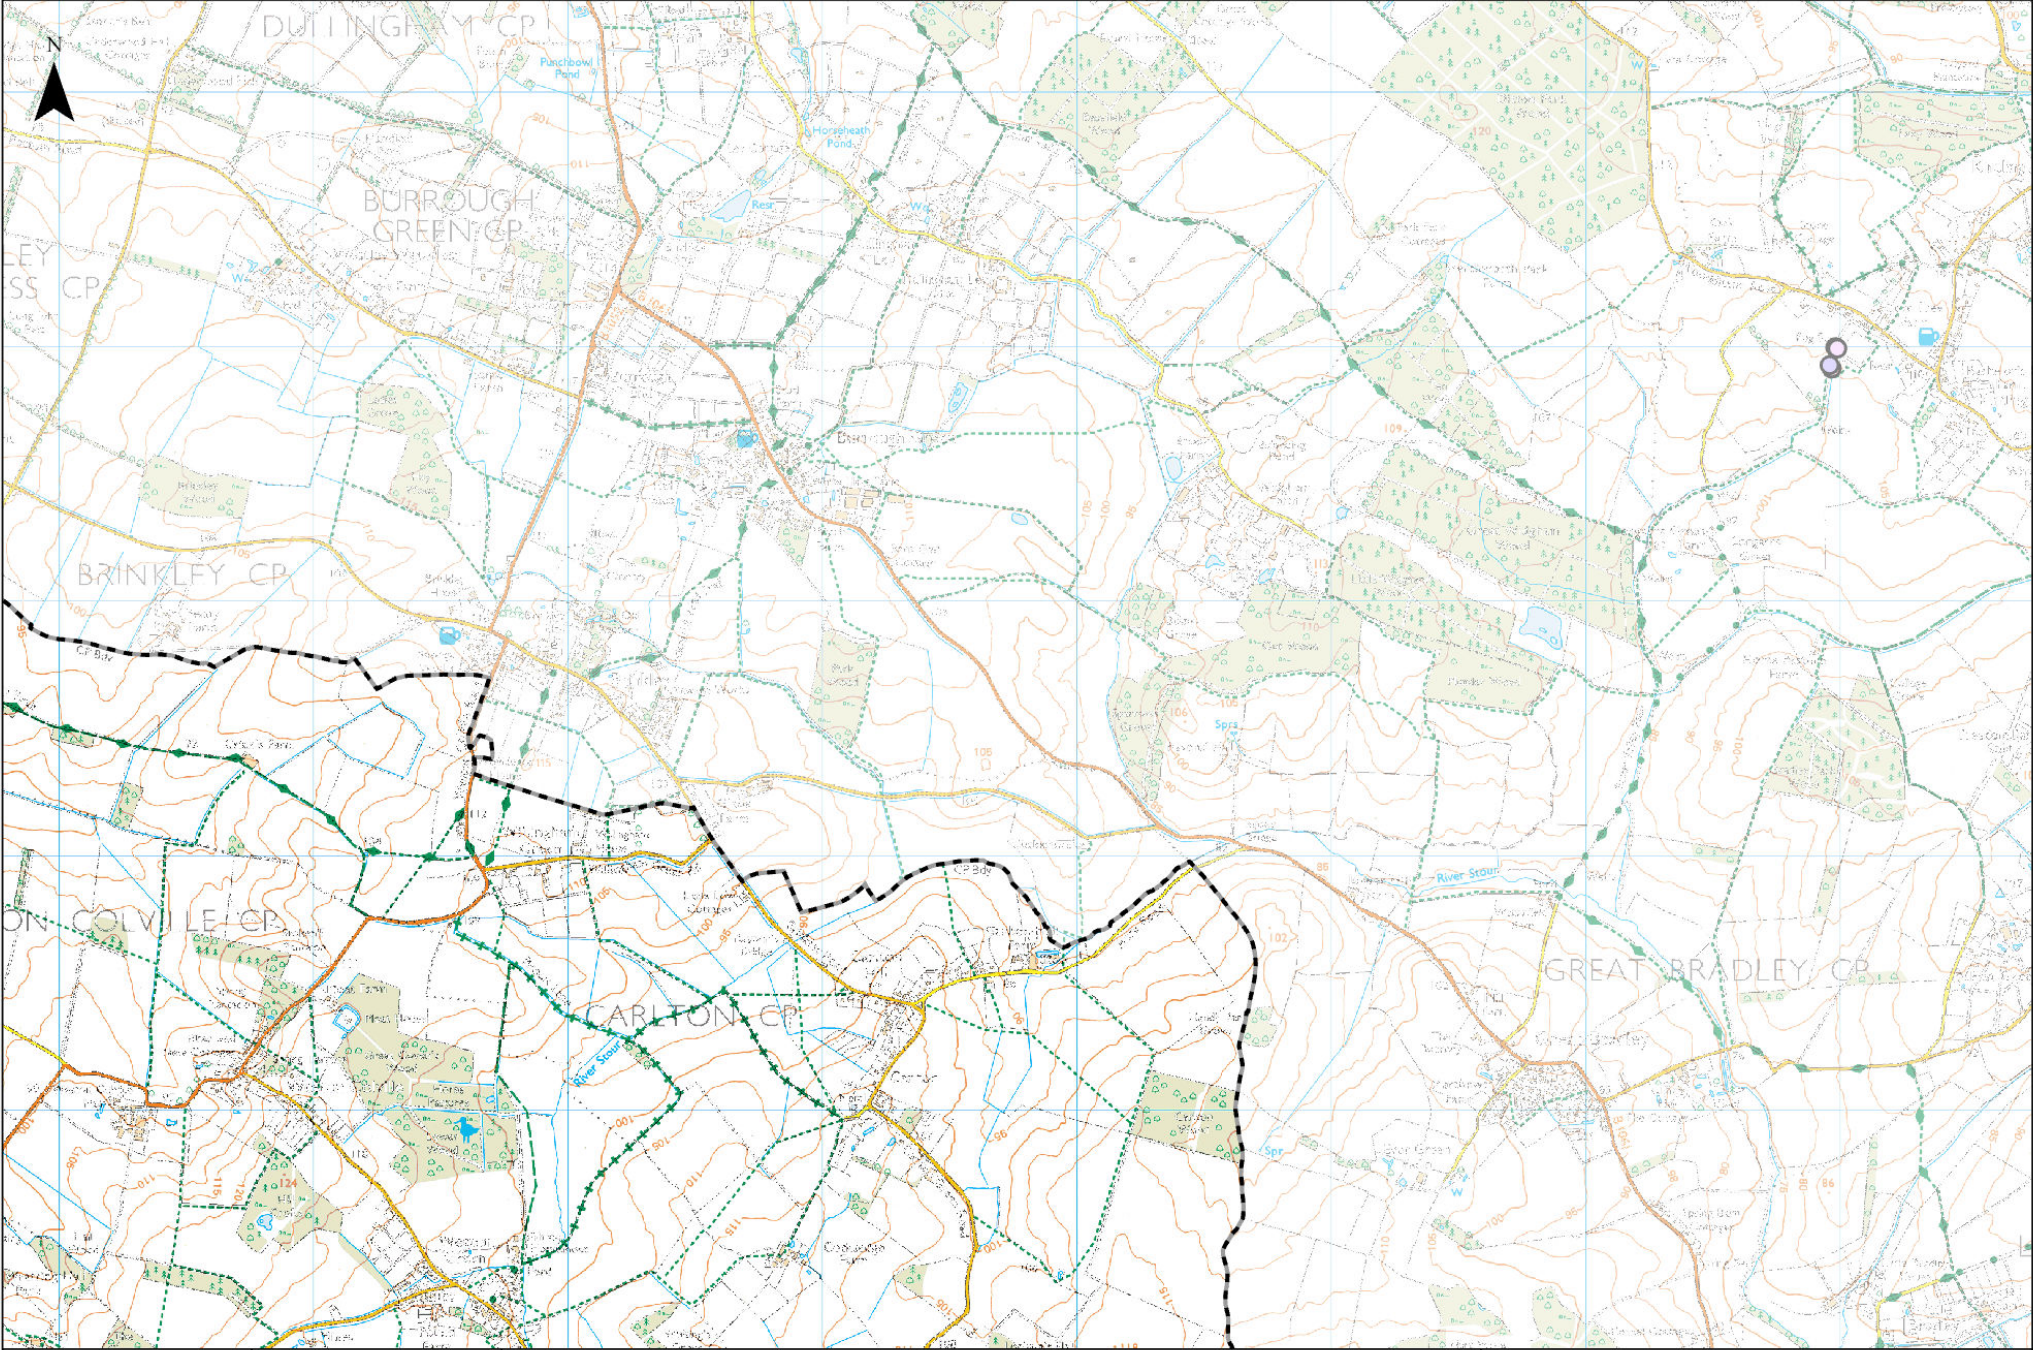

**Legend**

Cambridge City Boundary	Stilling Well
South Cambridgeshire Boundary	Water Baffles

**Defences (EA Maintained)**

Control Gate	Bridge Abutment
Debris Screen	Demountable Defence
Outfall	Embankment
Ramp	Engineered High Ground
Security Screen	Flood Gate
Steps	Spillway
Stilling Basin	Wall



**Notes**

This map presents the various hydraulic features that influence the hydrological regime and risk of flooding. The layers are provided by the Environment Agency (EA) and show flood defences currently owned, managed or inspected by the EA.

Flood defences can be structures, buildings or parts of buildings. Typically these are earth banks, stone and concrete walls, or sheet-piling that is used to prevent or control the extent of flooding.

A defence is any asset that provides flood defence or coastal protection functions. This includes both man-made and natural defences. Natural defences may include man-made elements to make them more effective or protect them from erosion. Normally a number of assets will be used together to manage the risk in a particular area, working in combination within a risk management system.



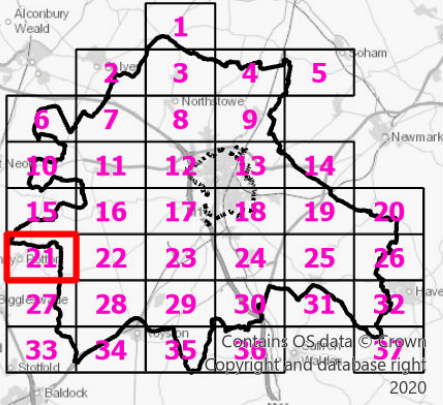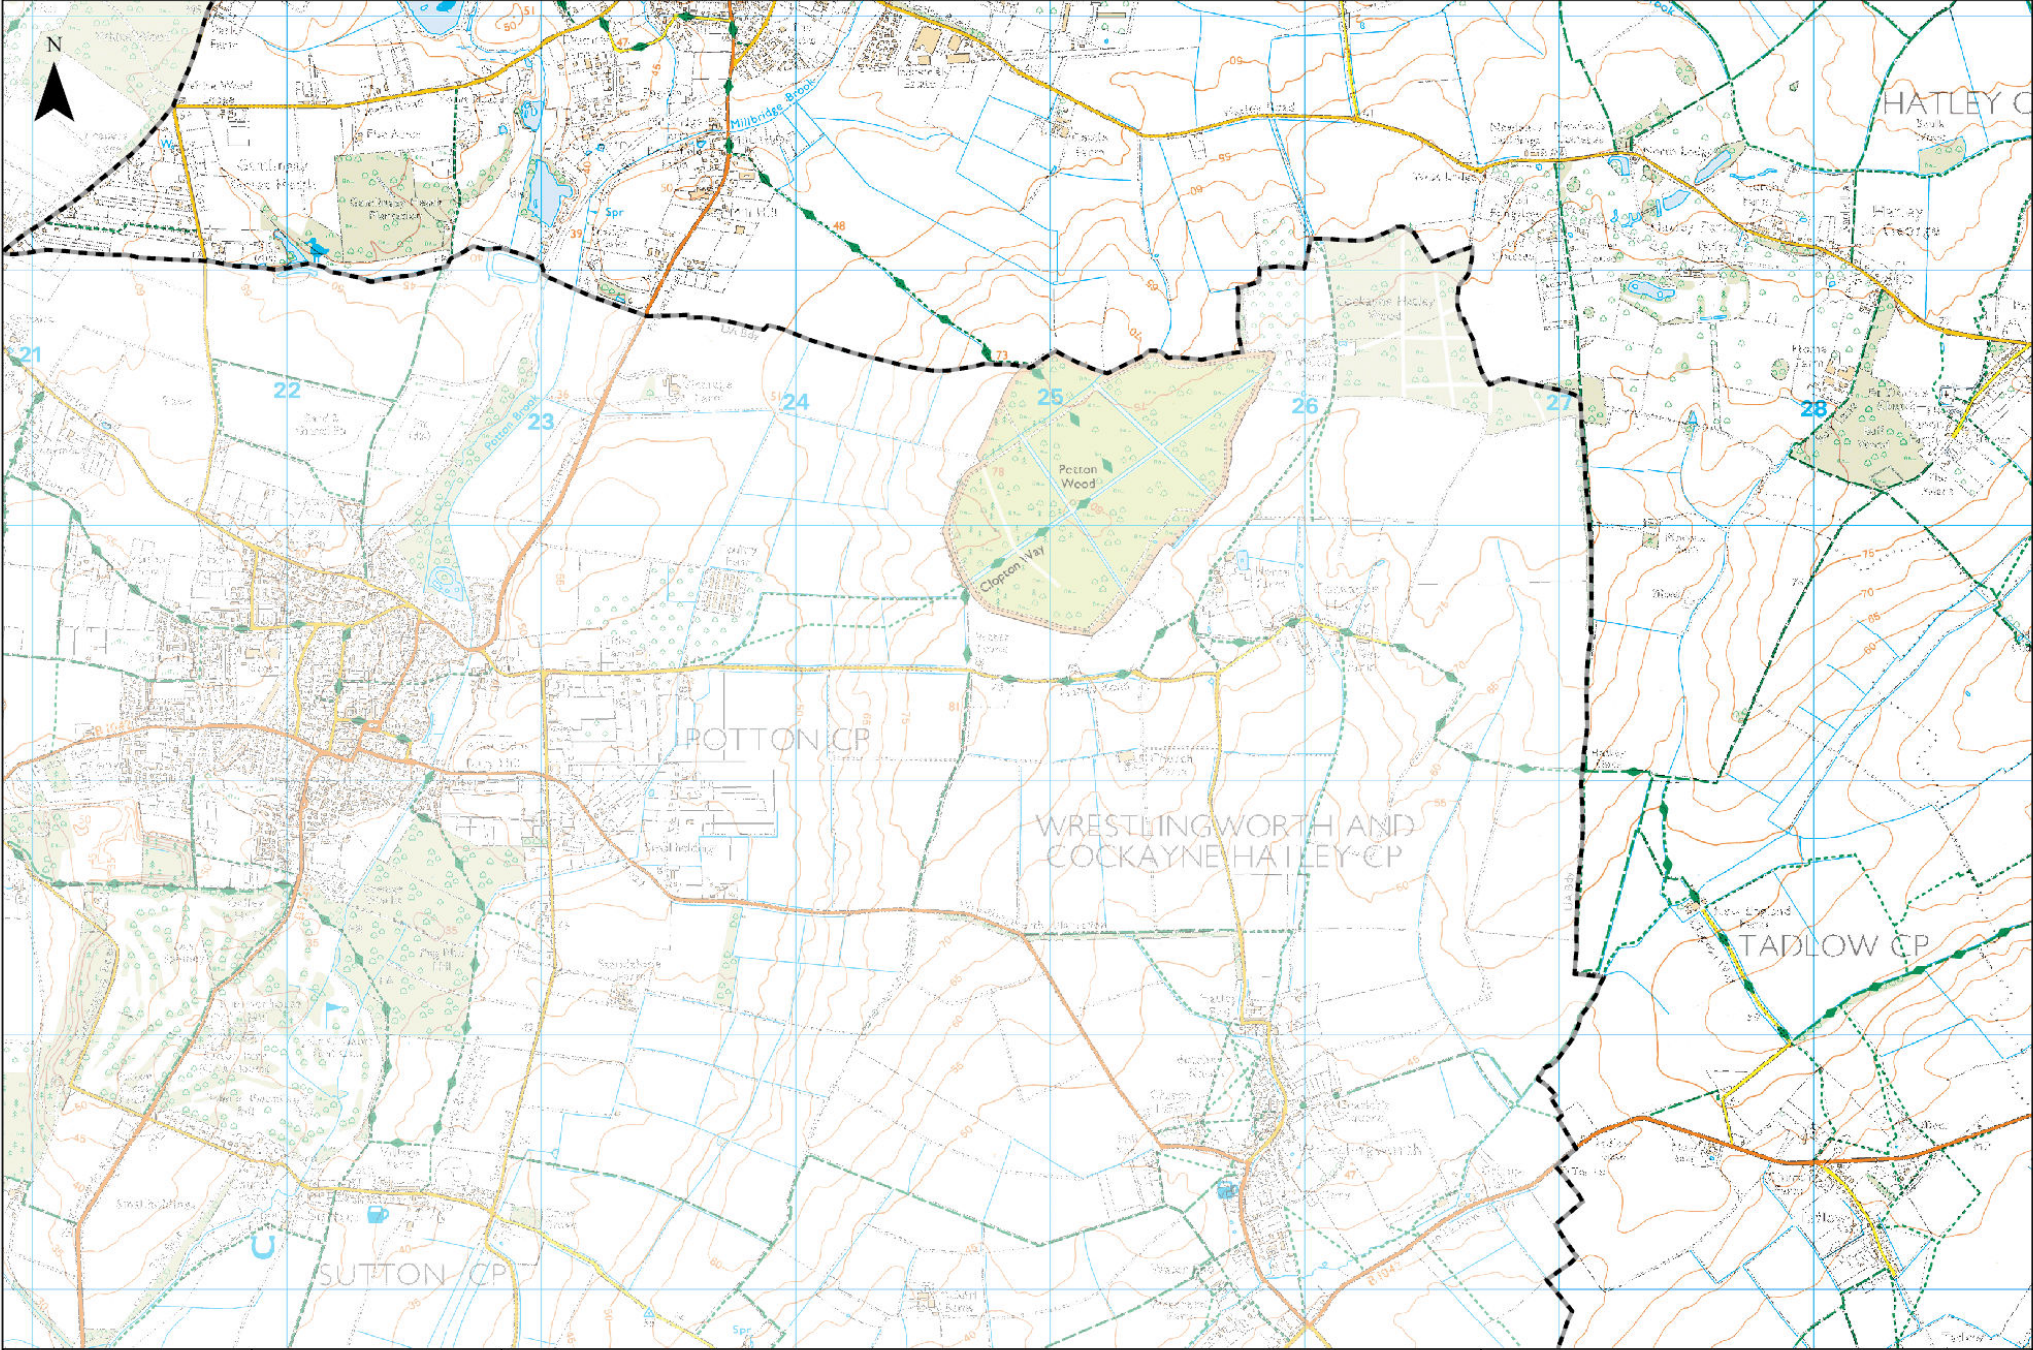

- Legend**
- Cambridge City Boundary
  - South Cambridgeshire Boundary
  - Control Gate
  - Debris Screen
  - Outfall
  - Ramp
  - Security Screen
  - Steps
  - Stilling Basin
  - Stilling Well
  - Water Baffles
  - Bridge Abutment
  - Demountable Defence
  - Embankment
  - Engineered High Ground
  - Flood Gate
  - Spillway
  - Wall



**Notes**

This map presents the various hydraulic features that influence the hydrological regime and risk of flooding. The layers are provided by the Environment Agency (EA) and show flood defences currently owned, managed or inspected by the EA.

Flood defences can be structures, buildings or parts of buildings. Typically these are earth banks, stone and concrete walls, or sheet-piling that is used to prevent or control the extent of flooding.

A defence is any asset that provides flood defence or coastal protection functions. This includes both man-made and natural defences. Natural defences may include man-made elements to make them more effective or protect them from erosion. Normally a number of assets will be used together to manage the risk in a particular area, working in combination within a risk management system.



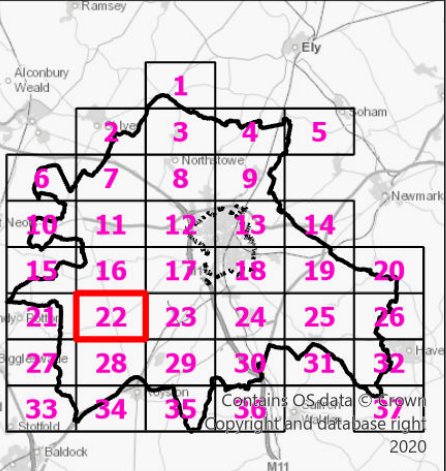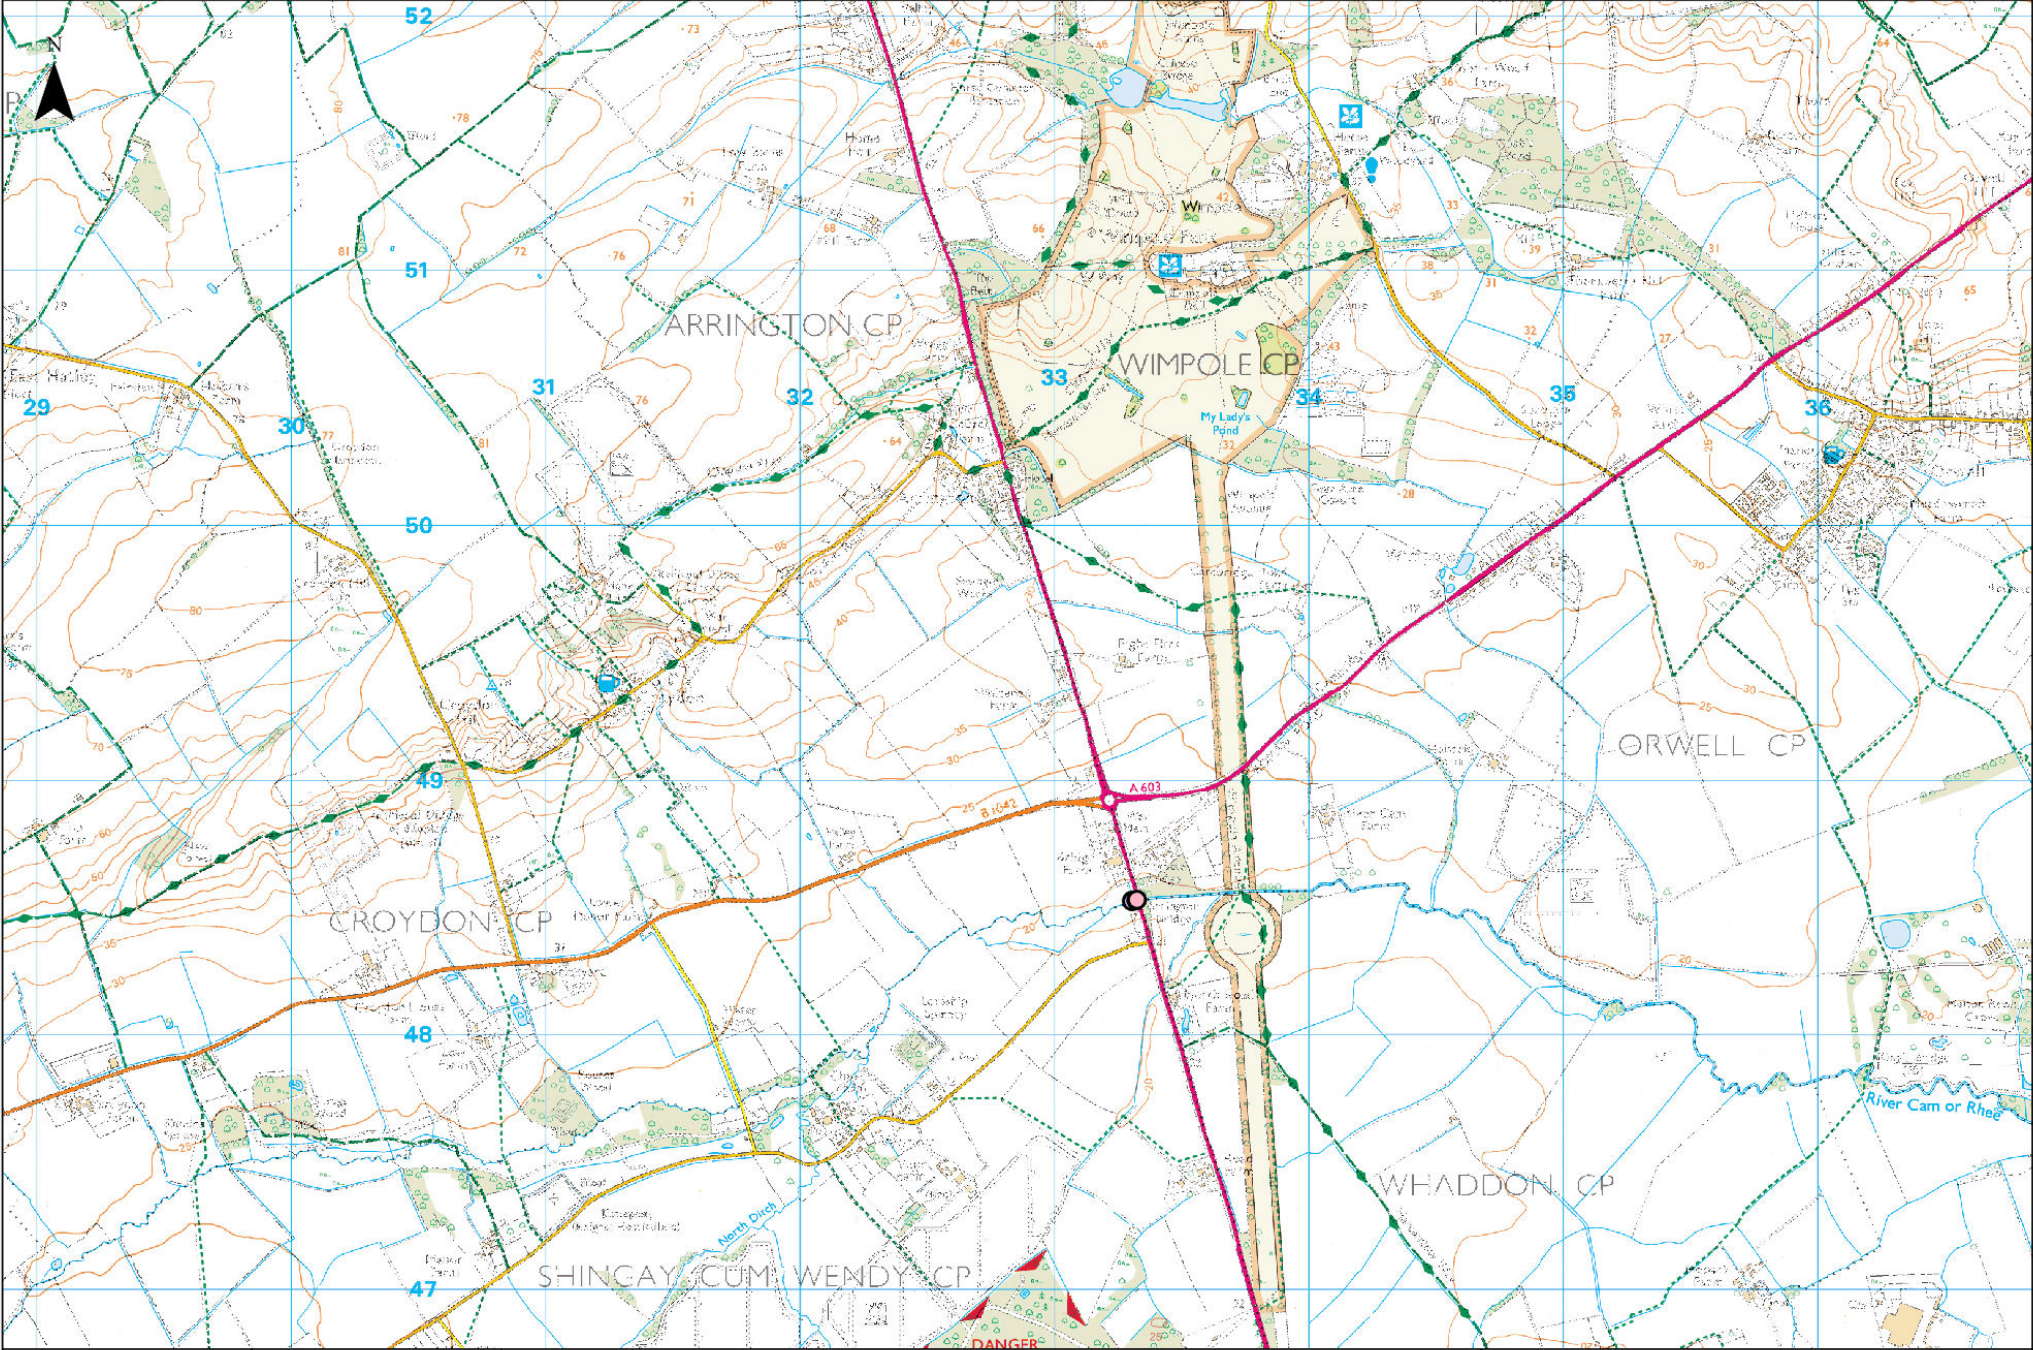

- Legend**
- Cambridge City Boundary
  - South Cambridgeshire Boundary
  - Control Gate
  - Debris Screen
  - Outfall
  - Ramp
  - Security Screen
  - Steps
  - Stilling Basin
  - Stilling Well
  - Water Baffles
  - Bridge Abutment
  - Demountable Defence
  - Embankment
  - Engineered High Ground
  - Flood Gate
  - Spillway
  - Wall



**Notes**

This map presents the various hydraulic features that influence the hydrological regime and risk of flooding. The layers are provided by the Environment Agency (EA) and show flood defences currently owned, managed or inspected by the EA.

Flood defences can be structures, buildings or parts of buildings. Typically these are earth banks, stone and concrete walls, or sheet-piling that is used to prevent or control the extent of flooding.

A defence is any asset that provides flood defence or coastal protection functions. This includes both man-made and natural defences. Natural defences may include man-made elements to make them more effective or protect them from erosion. Normally a number of assets will be used together to manage the risk in a particular area, working in combination within a risk management system.



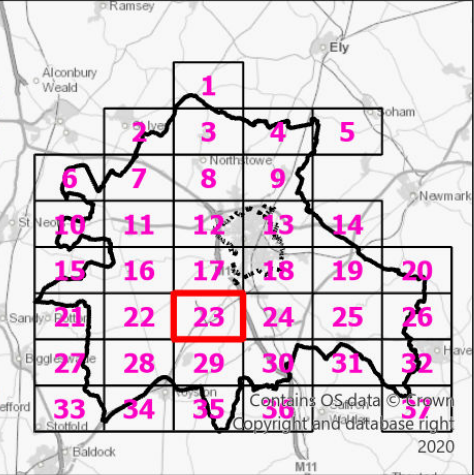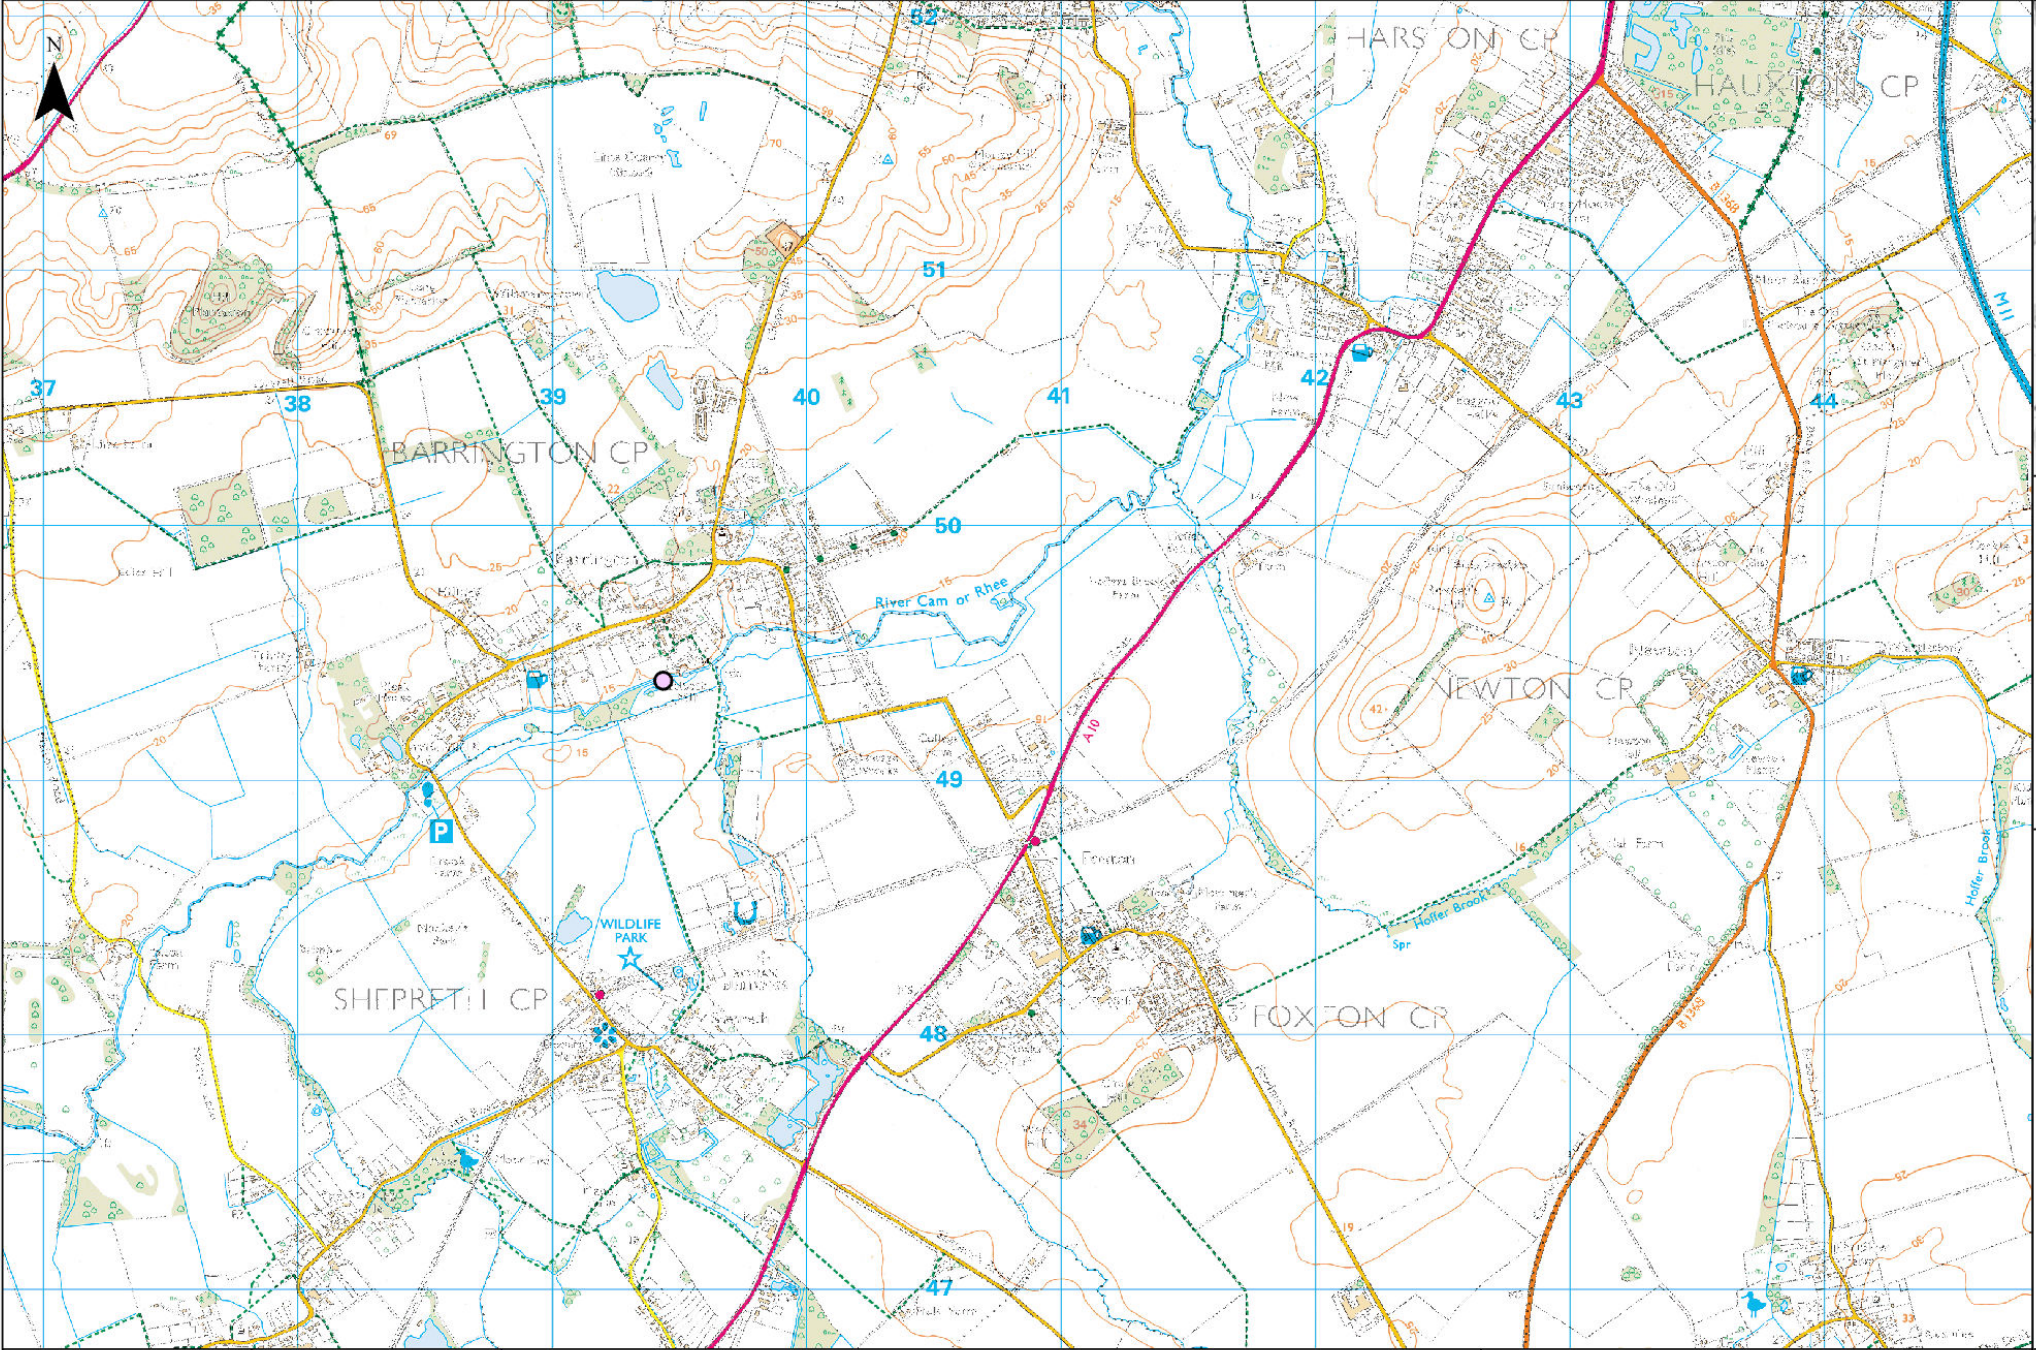

- Legend**
- Cambridge City Boundary
  - South Cambridgeshire Boundary
  - Control Gate
  - Debris Screen
  - Outfall
  - Ramp
  - Security Screen
  - Steps
  - Stilling Basin
  - Stilling Well
  - Water Baffles
  - Bridge Abutment
  - Demountable Defence
  - Embankment
  - Engineered High Ground
  - Flood Gate
  - Spillway
  - Wall



**Notes**

This map presents the various hydraulic features that influence the hydrological regime and risk of flooding. The layers are provided by the Environment Agency (EA) and show flood defences currently owned, managed or inspected by the EA.

Flood defences can be structures, buildings or parts of buildings. Typically these are earth banks, stone and concrete walls, or sheet-piling that is used to prevent or control the extent of flooding.

A defence is any asset that provides flood defence or coastal protection functions. This includes both man-made and natural defences. Natural defences may include man-made elements to make them more effective or protect them from erosion. Normally a number of assets will be used together to manage the risk in a particular area, working in combination within a risk management system.



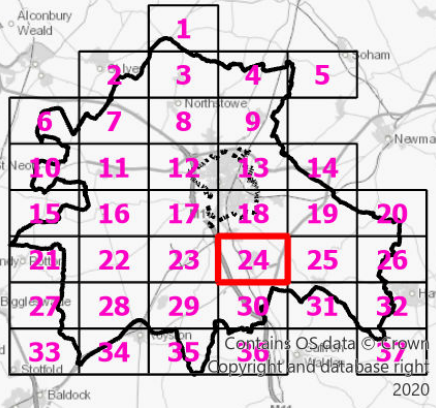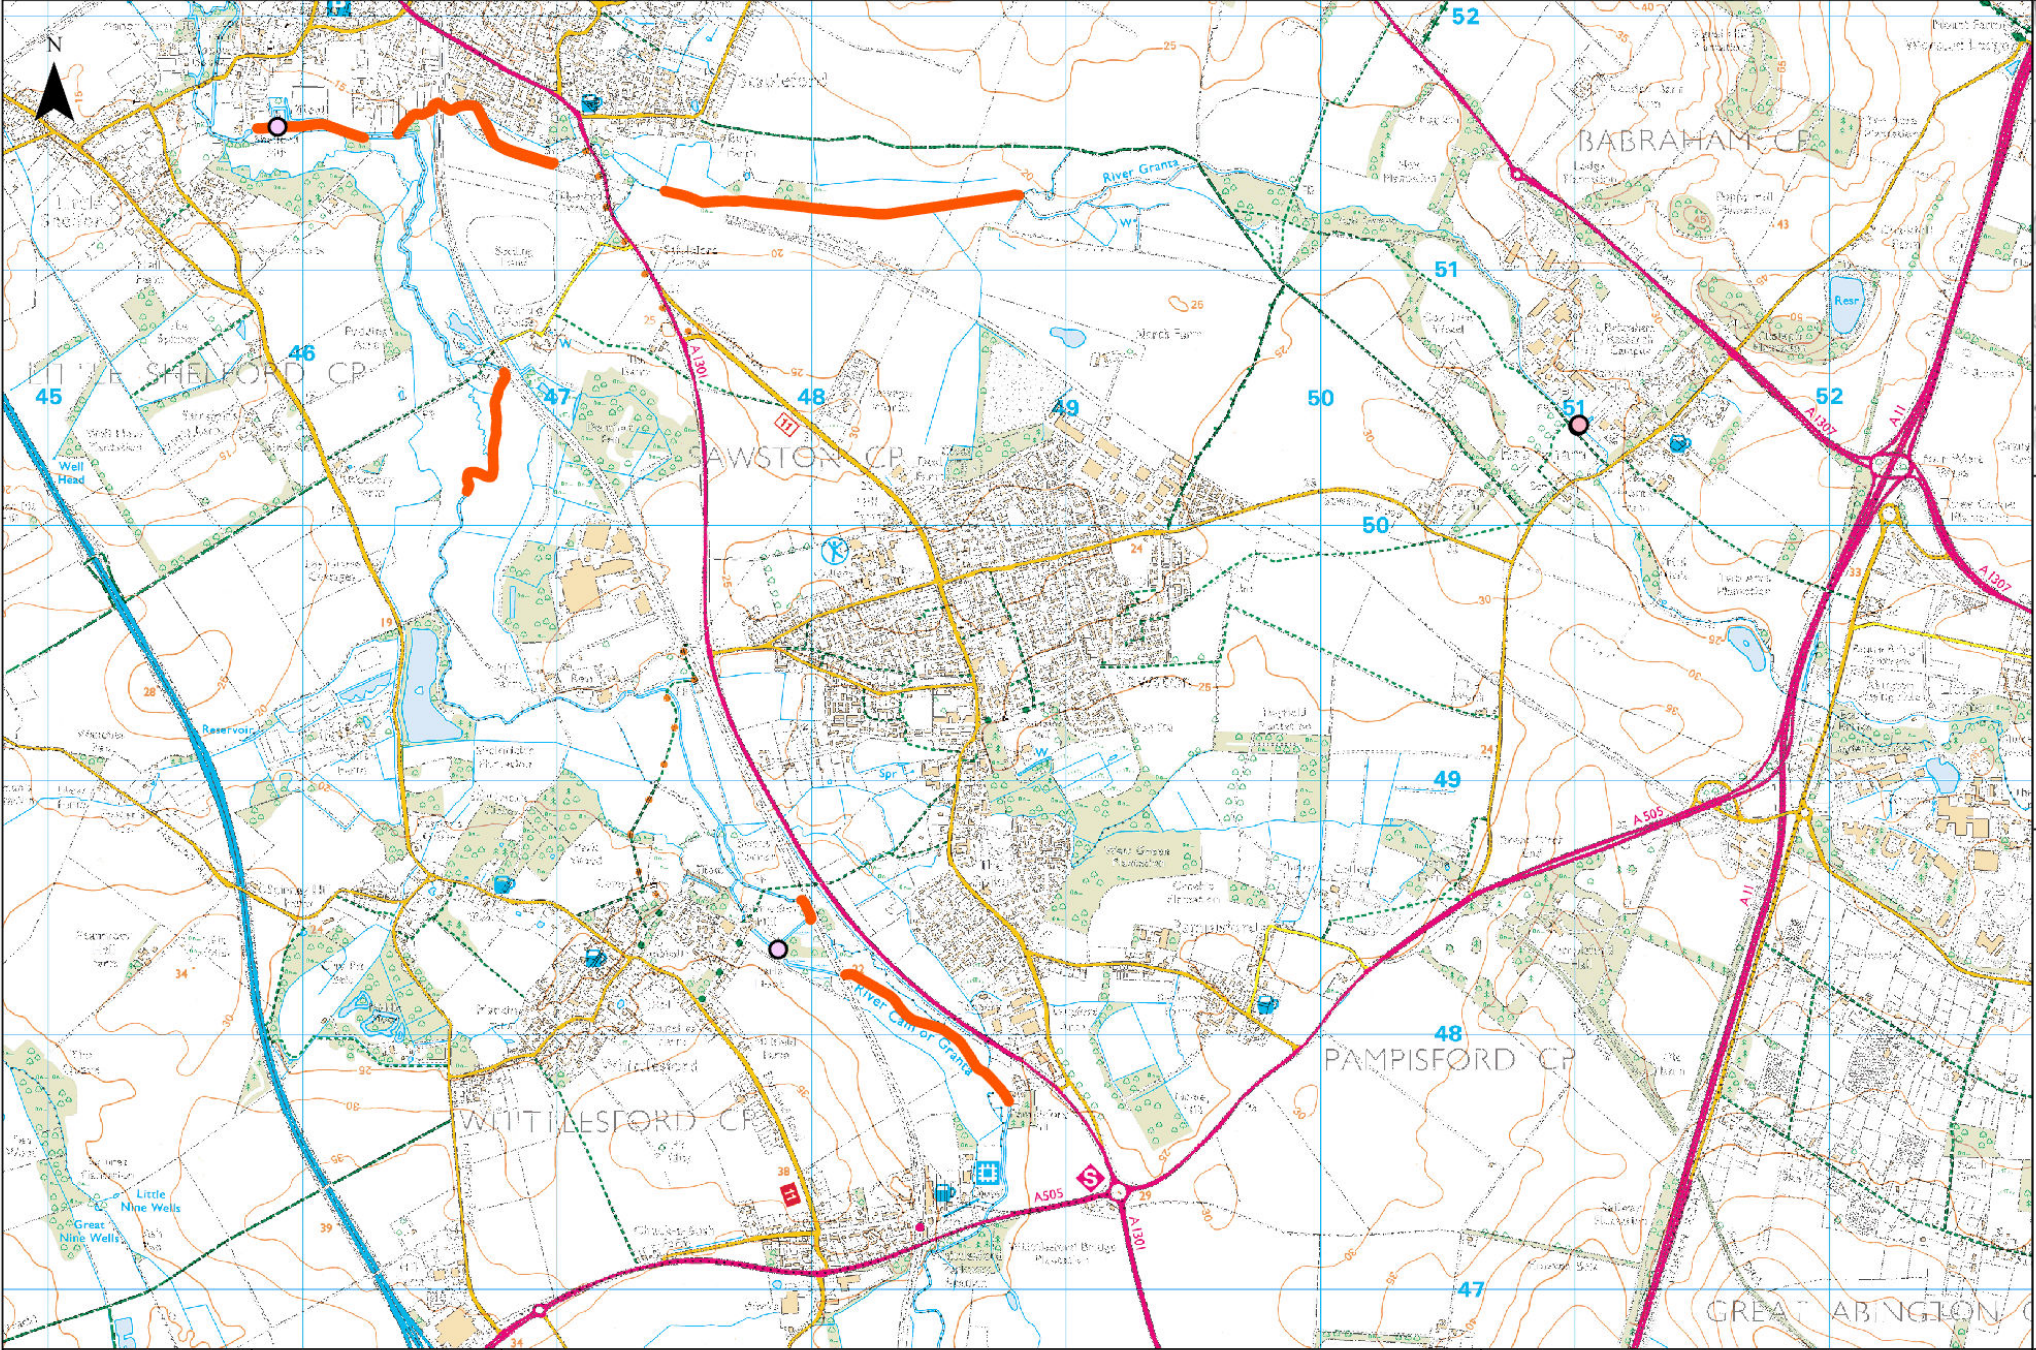

**Legend**

Cambridge City Boundary	Stilling Well
South Cambridgeshire Boundary	Water Baffles
<b>Defences (EA Maintained)</b>	
Control Gate	Bridge Abutment
Debris Screen	Demountable Defence
Outfall	Embankment
Ramp	Engineered High Ground
Security Screen	Flood Gate
Steps	Spillway
Stilling Basin	Wall



**Notes**

This map presents the various hydraulic features that influence the hydrological regime and risk of flooding. The layers are provided by the Environment Agency (EA) and show flood defences currently owned, managed or inspected by the EA.

Flood defences can be structures, buildings or parts of buildings. Typically these are earth banks, stone and concrete walls, or sheet-piling that is used to prevent or control the extent of flooding.

A defence is any asset that provides flood defence or coastal protection functions. This includes both man-made and natural defences. Natural defences may include man-made elements to make them more effective or protect them from erosion. Normally a number of assets will be used together to manage the risk in a particular area, working in combination within a risk management system.



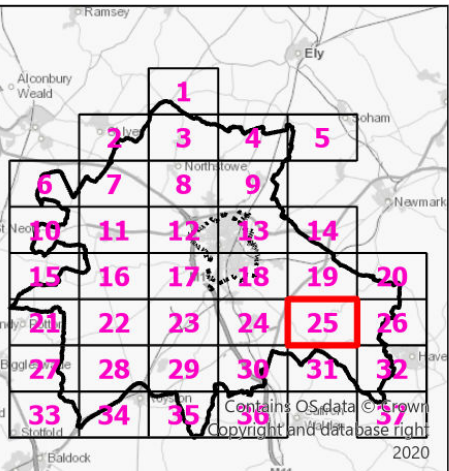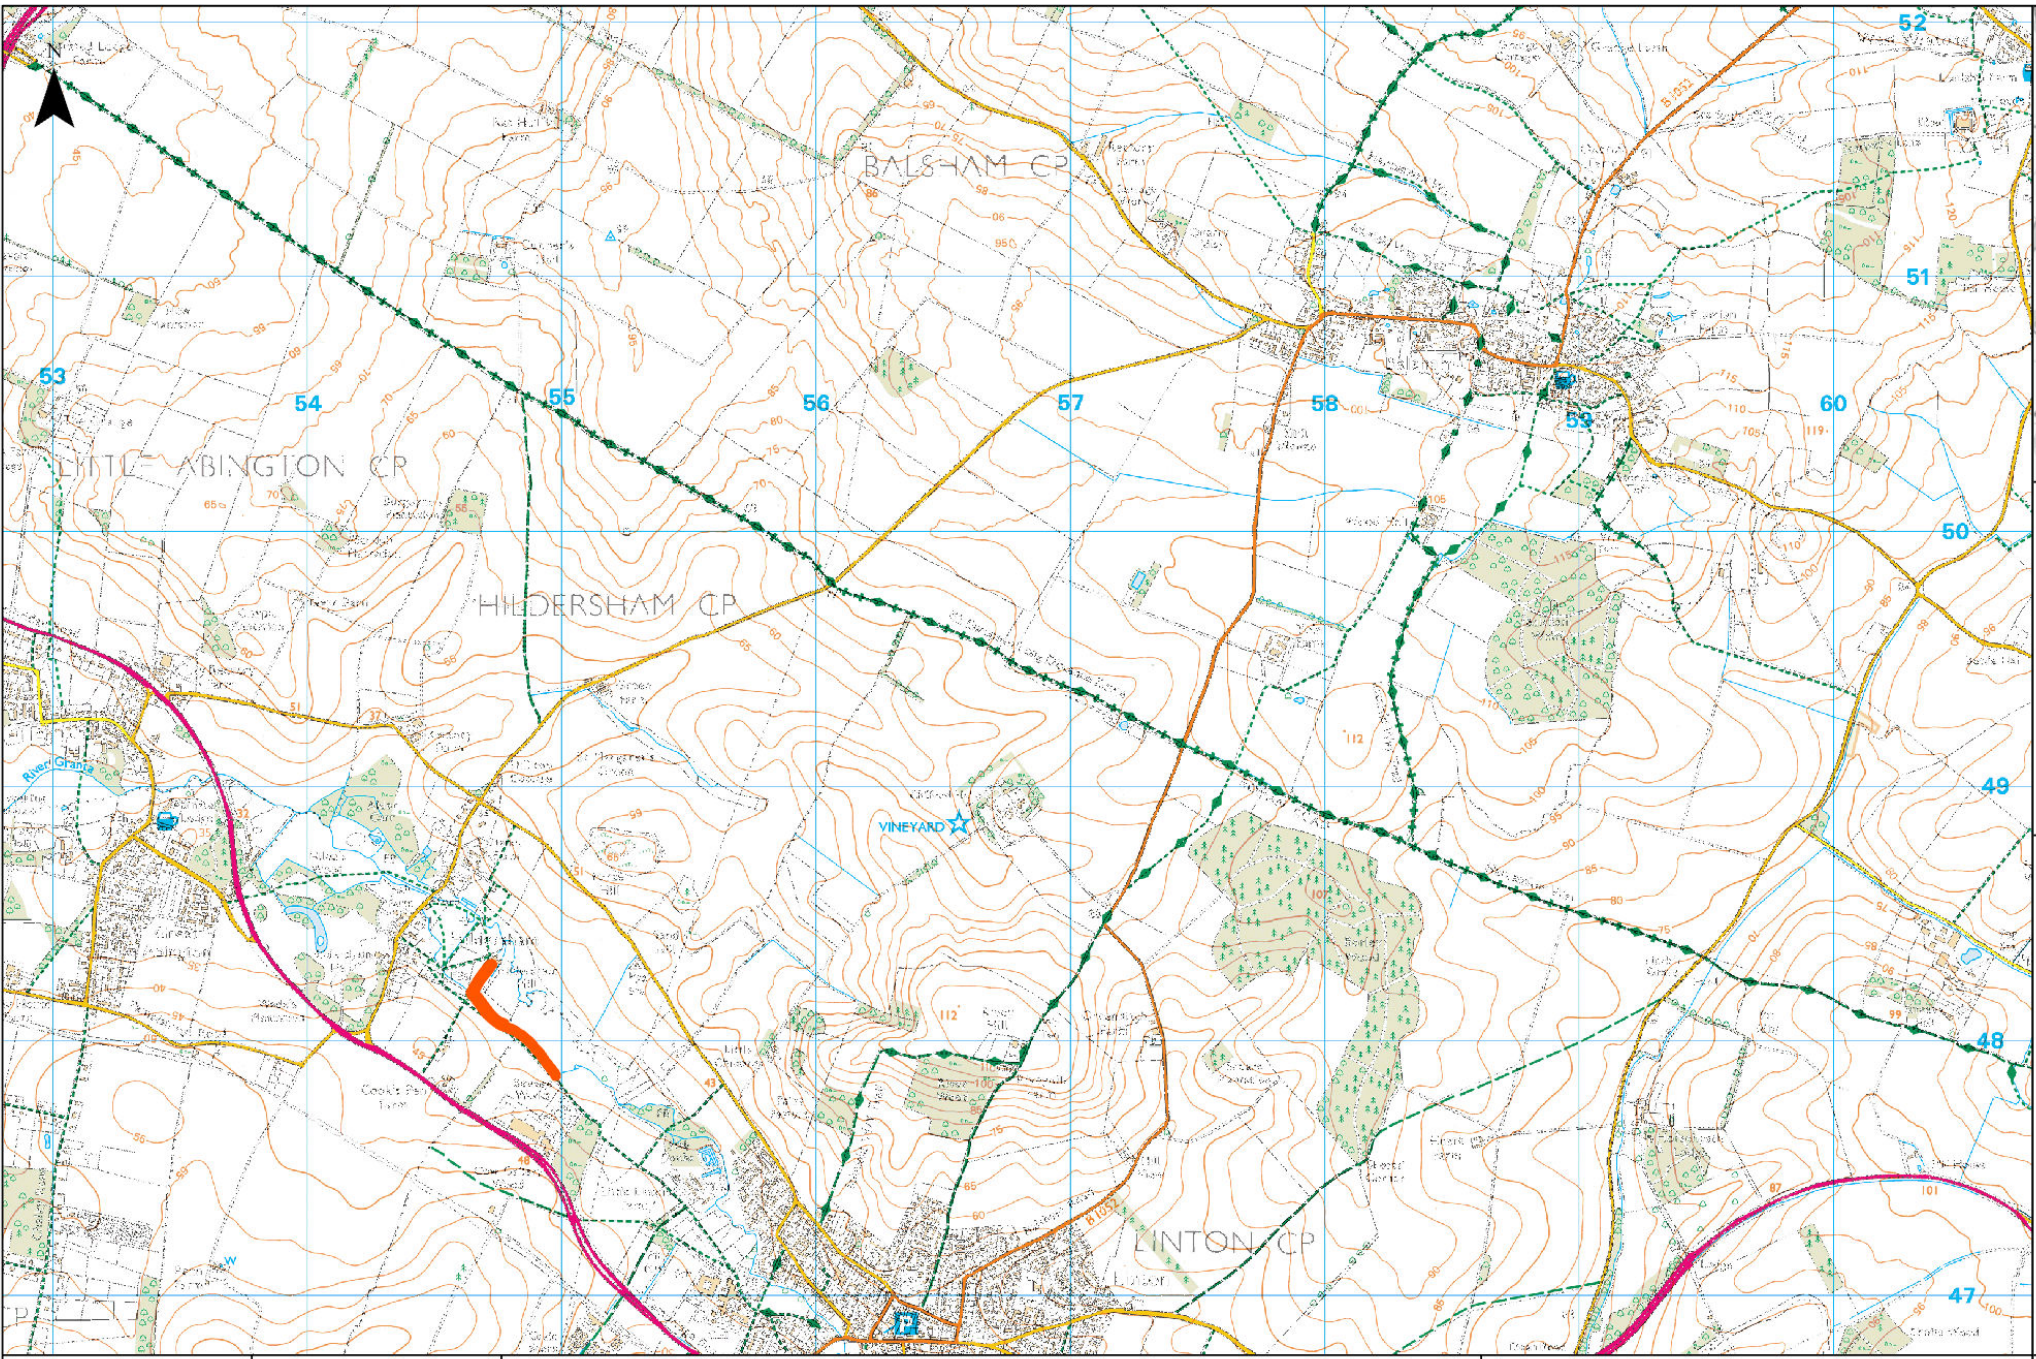

- Legend**
- Cambridge City Boundary
  - South Cambridgeshire Boundary
  - Control Gate
  - Debris Screen
  - Outfall
  - Ramp
  - Security Screen
  - Steps
  - Stilling Basin
  - Stilling Well
  - Water Baffles
  - Bridge Abutment
  - Demountable Defence
  - Embankment
  - Engineered High Ground
  - Flood Gate
  - Spillway
  - Wall



**Notes**

This map presents the various hydraulic features that influence the hydrological regime and risk of flooding. The layers are provided by the Environment Agency (EA) and show flood defences currently owned, managed or inspected by the EA.

Flood defences can be structures, buildings or parts of buildings. Typically these are earth banks, stone and concrete walls, or sheet-piling that is used to prevent or control the extent of flooding.

A defence is any asset that provides flood defence or coastal protection functions. This includes both man-made and natural defences. Natural defences may include man-made elements to make them more effective or protect them from erosion. Normally a number of assets will be used together to manage the risk in a particular area, working in combination within a risk management system.



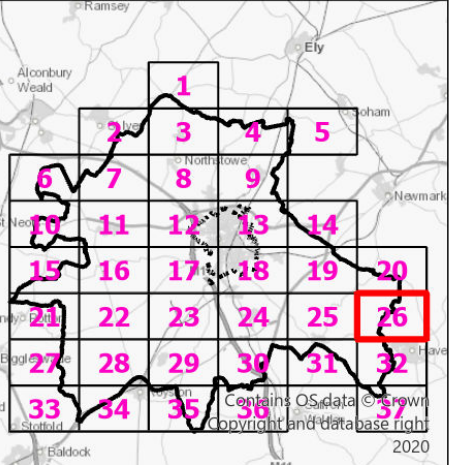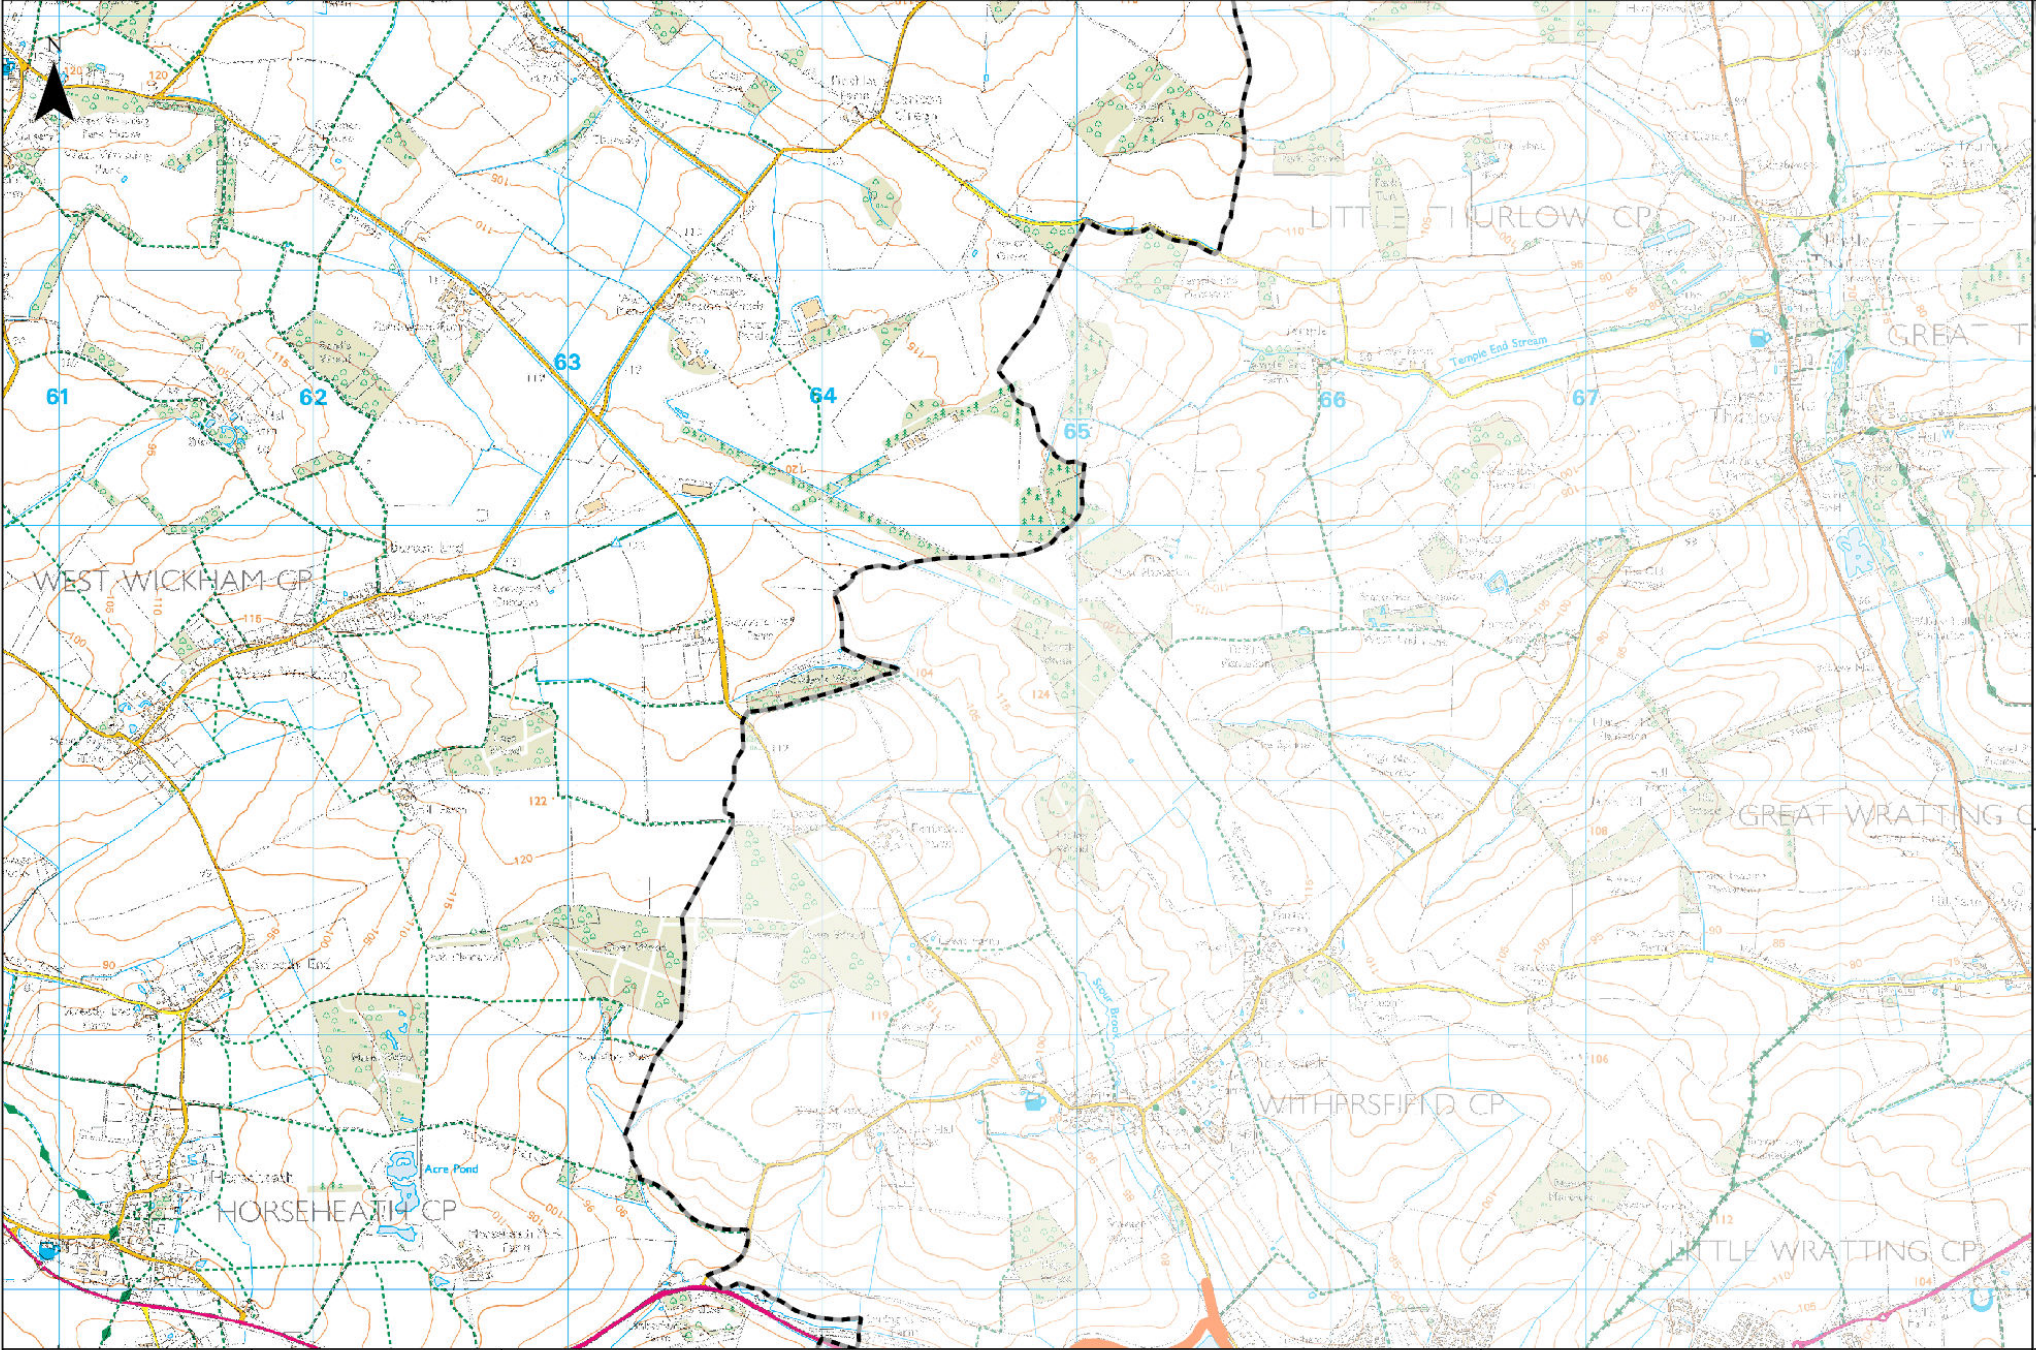

**Legend**

Cambridge City Boundary	Stilling Well
South Cambridgeshire Boundary	Water Baffles
<b>Defences (EA Maintained)</b>	
Control Gate	Bridge Abutment
Debris Screen	Demountable Defence
Outfall	Embankment
Ramp	Engineered High Ground
Security Screen	Flood Gate
Steps	Spillway
Stilling Basin	Wall



**Notes**

This map presents the various hydraulic features that influence the hydrological regime and risk of flooding. The layers are provided by the Environment Agency (EA) and show flood defences currently owned, managed or inspected by the EA.

Flood defences can be structures, buildings or parts of buildings. Typically these are earth banks, stone and concrete walls, or sheet-piling that is used to prevent or control the extent of flooding.

A defence is any asset that provides flood defence or coastal protection functions. This includes both man-made and natural defences. Natural defences may include man-made elements to make them more effective or protect them from erosion. Normally a number of assets will be used together to manage the risk in a particular area, working in combination within a risk management system.



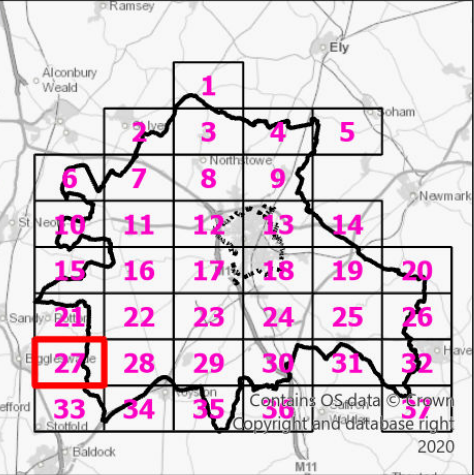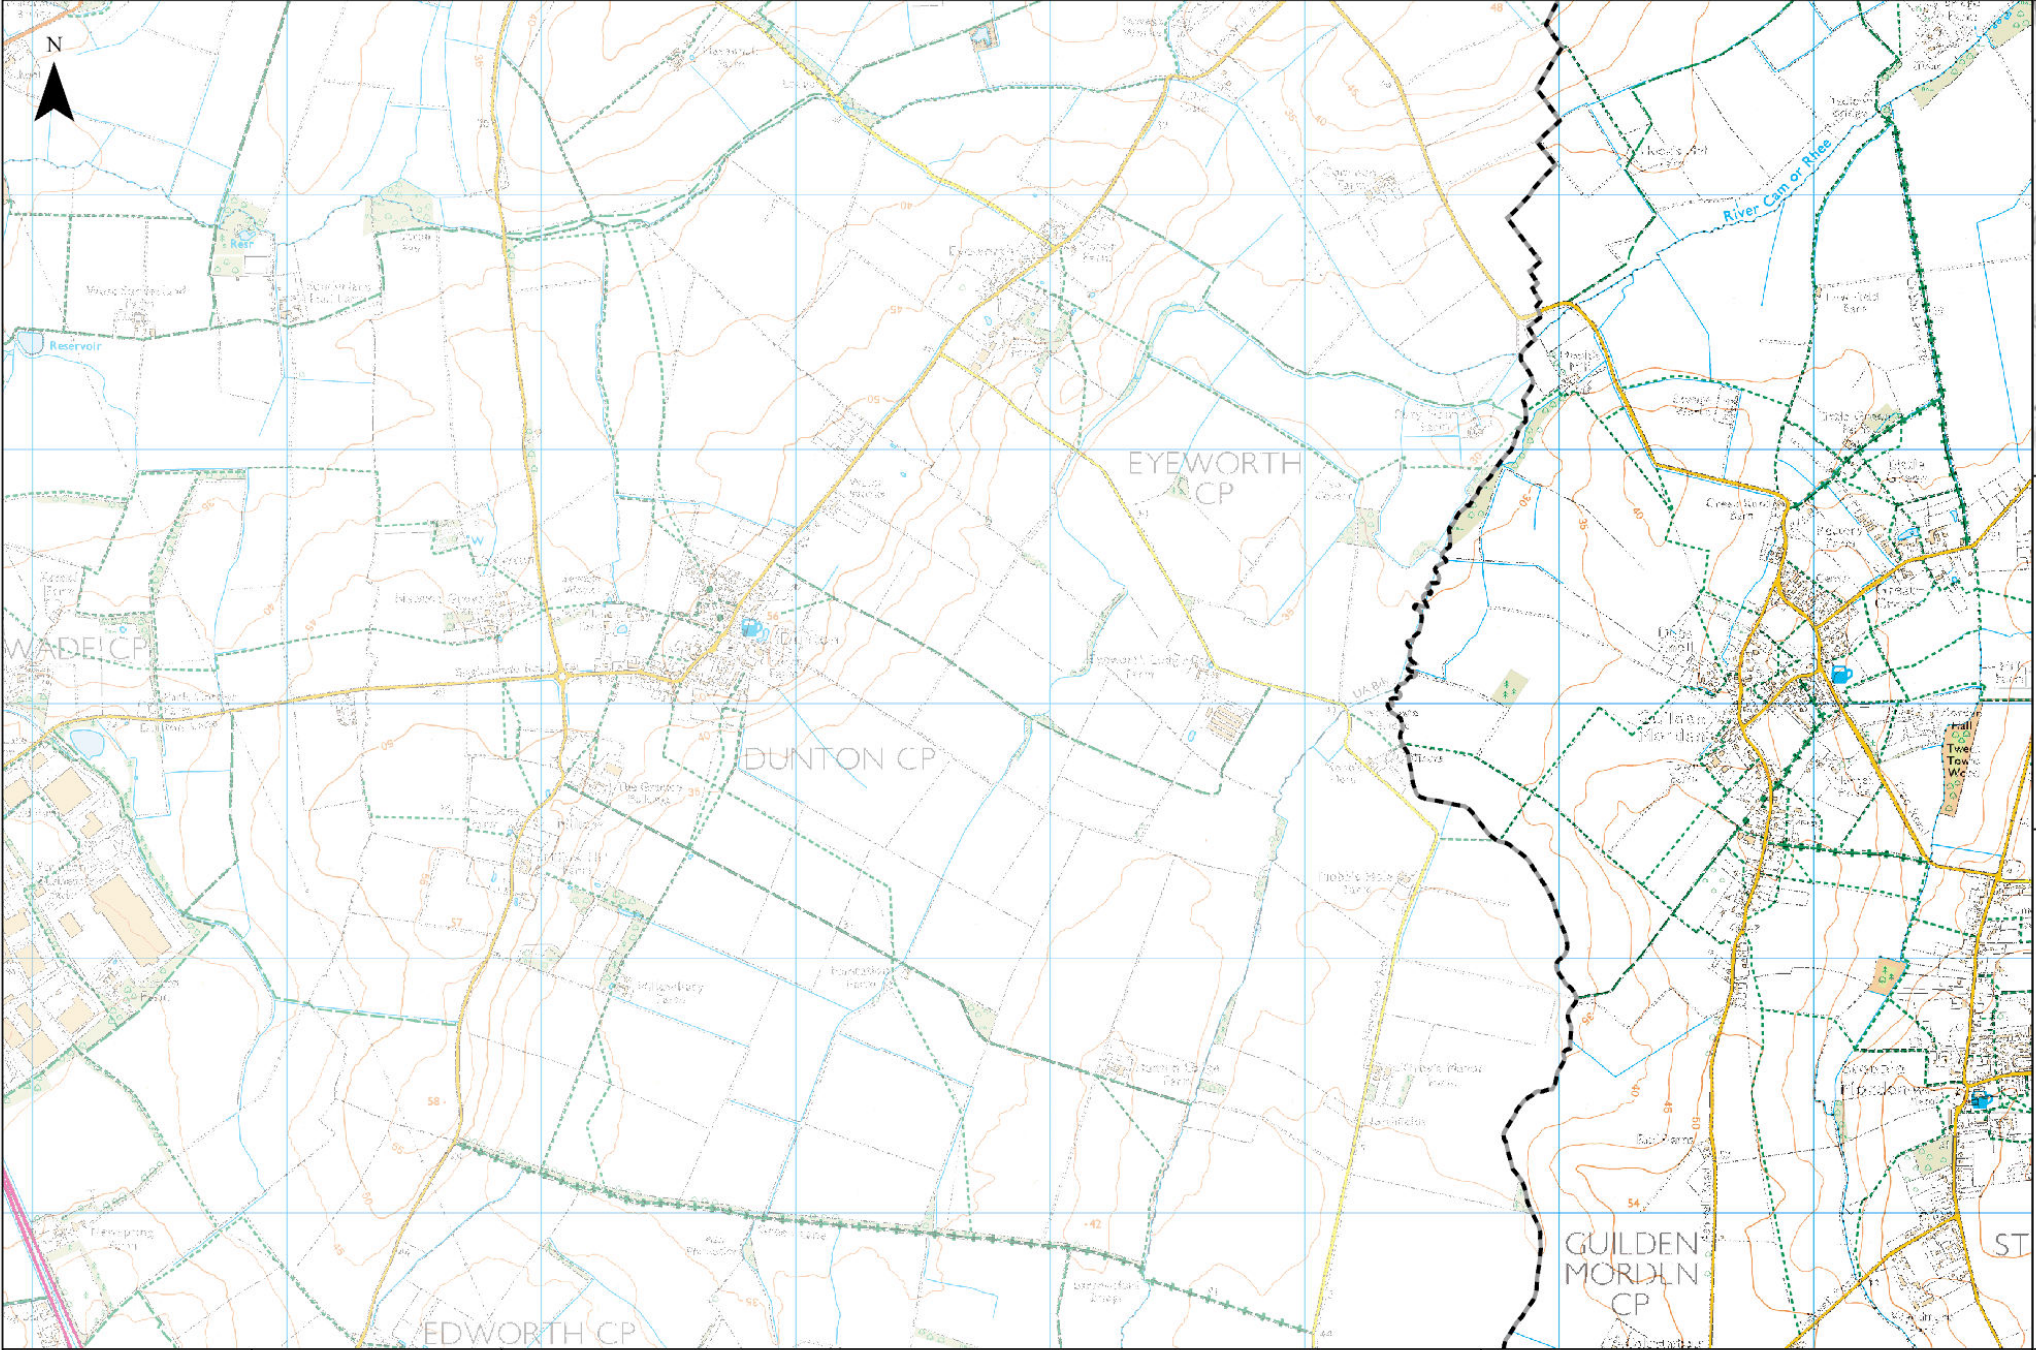

**Legend**

Cambridge City Boundary	Stilling Well
South Cambridgeshire Boundary	Water Baffles
<b>Defences (EA Maintained)</b>	
Control Gate	Bridge Abutment
Debris Screen	Demountable Defence
Outfall	Embankment
Ramp	Engineered High Ground
Security Screen	Flood Gate
Steps	Spillway
Stilling Basin	Wall



**Notes**

This map presents the various hydraulic features that influence the hydrological regime and risk of flooding. The layers are provided by the Environment Agency (EA) and show flood defences currently owned, managed or inspected by the EA.

Flood defences can be structures, buildings or parts of buildings. Typically these are earth banks, stone and concrete walls, or sheet-piling that is used to prevent or control the extent of flooding.

A defence is any asset that provides flood defence or coastal protection functions. This includes both man-made and natural defences. Natural defences may include man-made elements to make them more effective or protect them from erosion. Normally a number of assets will be used together to manage the risk in a particular area, working in combination within a risk management system.



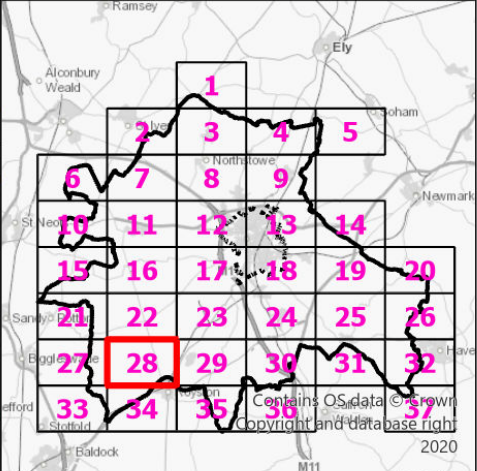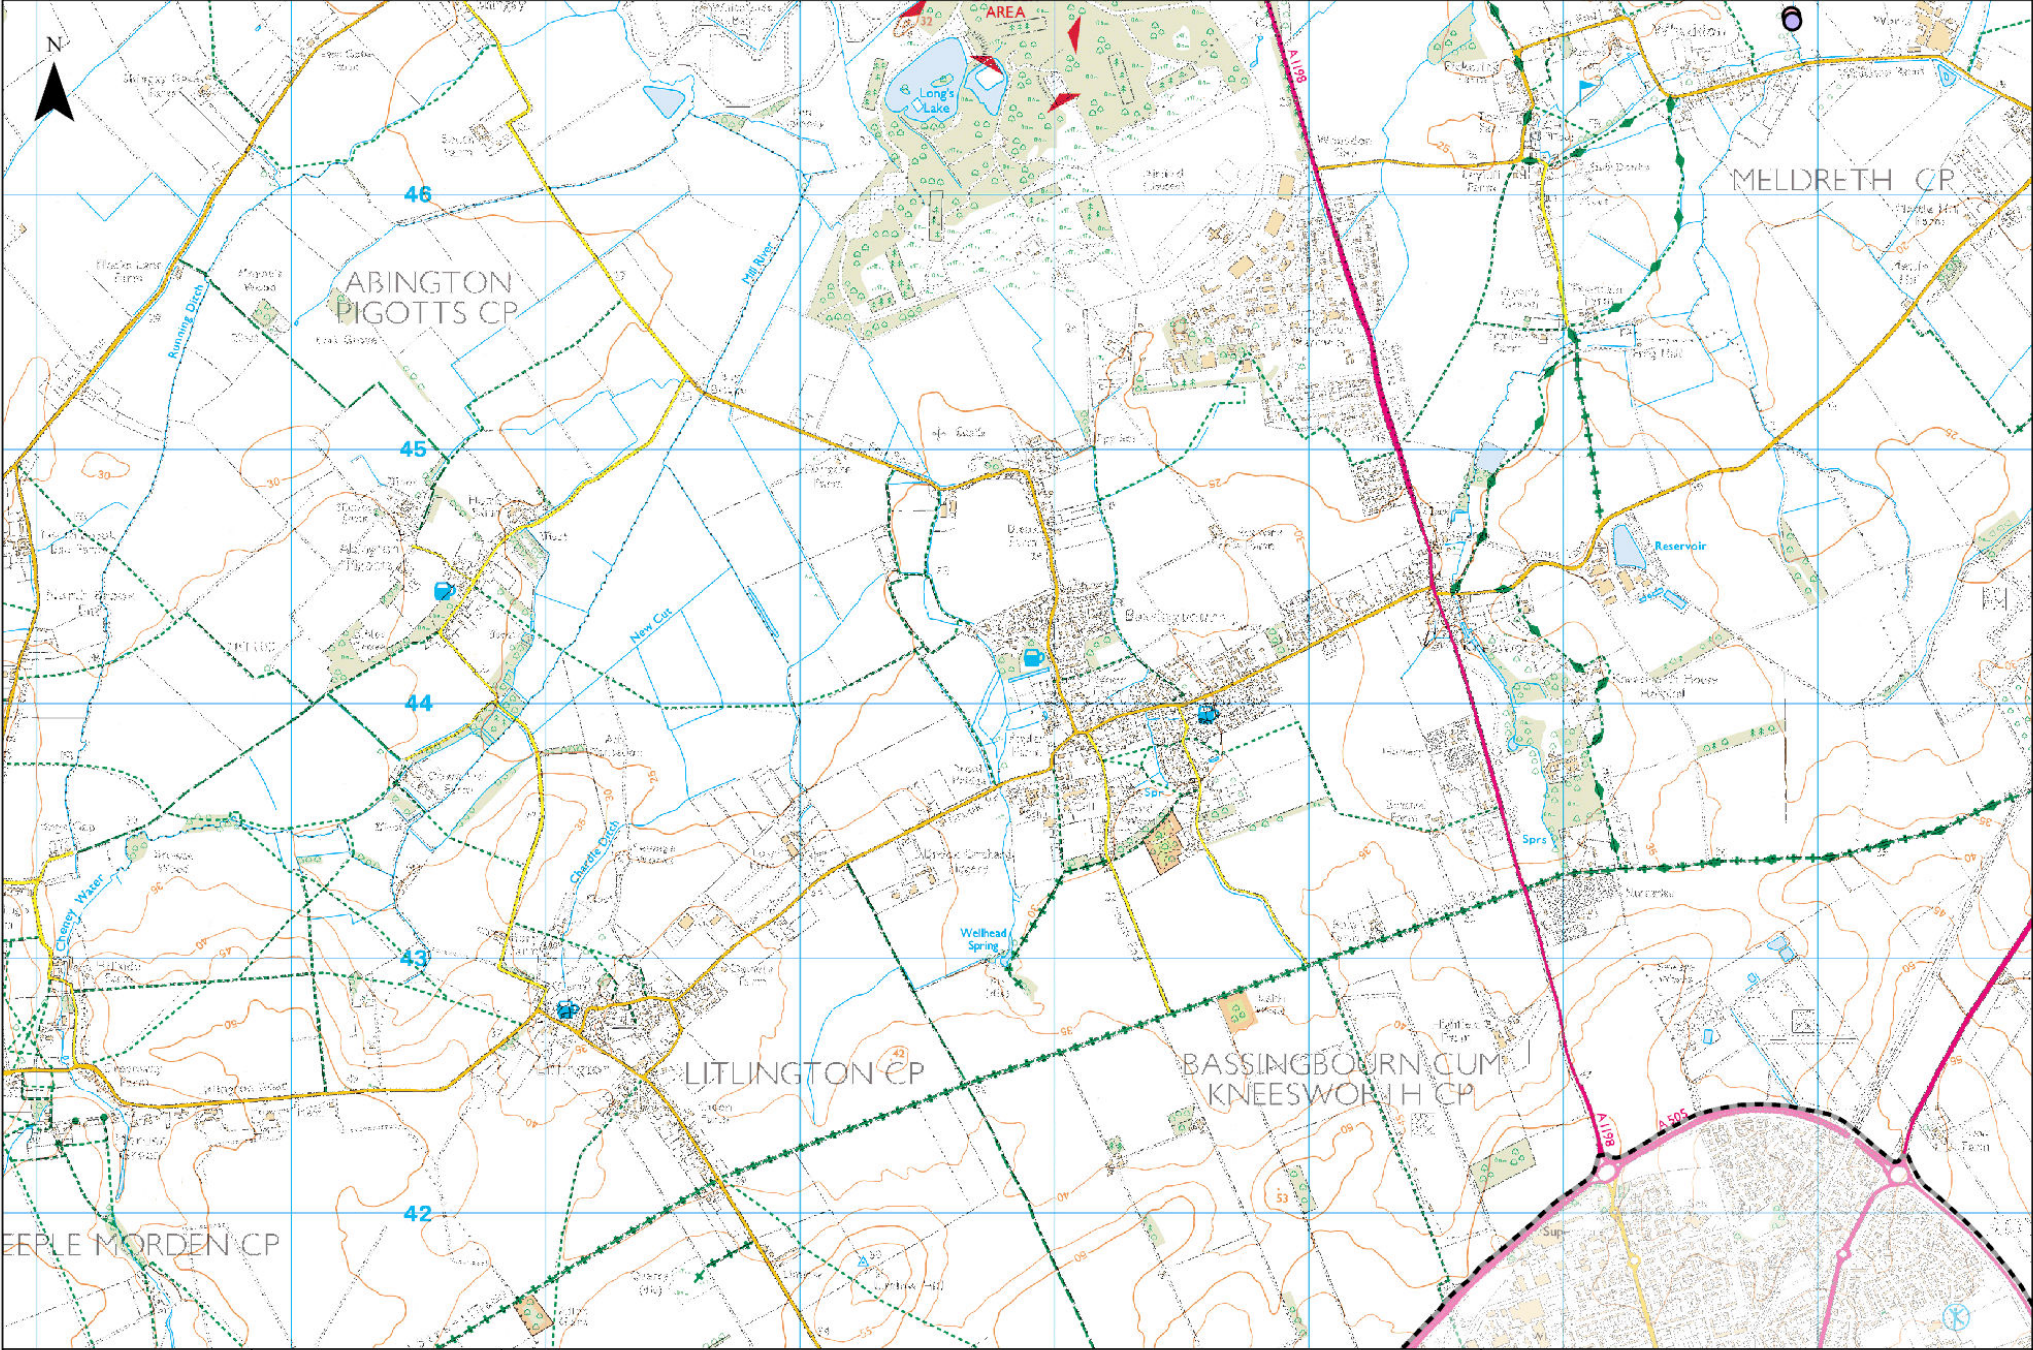

**Legend**

Cambridge City Boundary	Stilling Well
South Cambridgeshire Boundary	Water Baffles
<b>Defences (EA Maintained)</b>	
Control Gate	Bridge Abutment
Debris Screen	Demountable Defence
Outfall	Embankment
Ramp	Engineered High Ground
Security Screen	Flood Gate
Steps	Spillway
Stilling Basin	Wall

**Notes**

This map presents the various hydraulic features that influence the hydrological regime and risk of flooding. The layers are provided by the Environment Agency (EA) and show flood defences currently owned, managed or inspected by the EA.

Flood defences can be structures, buildings or parts of buildings. Typically these are earth banks, stone and concrete walls, or sheet-piling that is used to prevent or control the extent of flooding.

A defence is any asset that provides flood defence or coastal protection functions. This includes both man-made and natural defences. Natural defences may include man-made elements to make them more effective or protect them from erosion. Normally a number of assets will be used together to manage the risk in a particular area, working in combination within a risk management system.